



MacBook Pro 13" Retina Display Mid 2014 Upper Case Replacement

Replace the Upper case in your MacBook Pro 13" Retina Display Mid 2014.

Written By: Sam Lionheart



INTRODUCTION

Use this guide to replace the upper case, which includes the keyboard.

Some replacement upper case assemblies may include the trackpad and battery as well. In this case, skip steps 18 through 44.

This guide requires the removal of the heat sink. Don't forget to follow our [thermal paste application guide](#) before you reinstall your heat sink.



TOOLS:

- [P5 Pentalobe Screwdriver Retina MacBook Pro and Air](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [iOpener](#) (1)
- [Plastic Cards](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Arctic Silver ArctiClean](#) (1)
- [Arctic Silver Thermal Paste](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [T8 Torx Screwdriver](#) (1)



PARTS:

- [MacBook Pro 13" Retina \(Late 2013/Mid 2014\) Upper Case Assembly](#) (1)

Step 1 — Lower Case



- Remove the following ten screws securing the lower case to the upper case:
 - Two 2.3 mm Pentalobe screws
 - Eight 3.0 mm Pentalobe screws



Step 2




- Wedge your fingers between the upper case and the lower case.
- Gently pull the lower case away from the upper case to remove it.


Step 3




-  The lower case is connected to the upper case with two plastic clips near its center.
-  During reassembly, gently push down the center of the lower case to reattach the two plastic clips.

Step 4 — Battery Connector

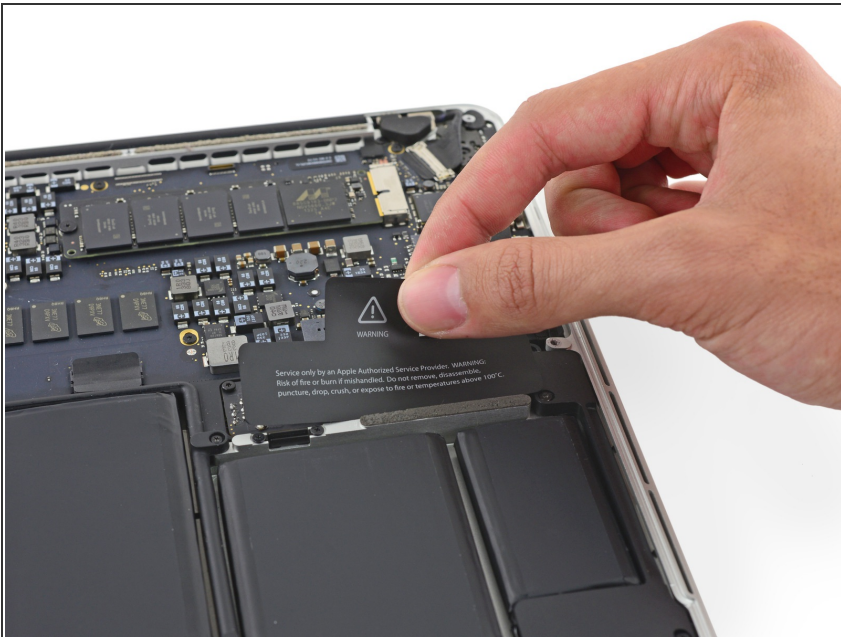

-  If necessary, remove the plastic cover adhered to the battery contact board.

Step 5

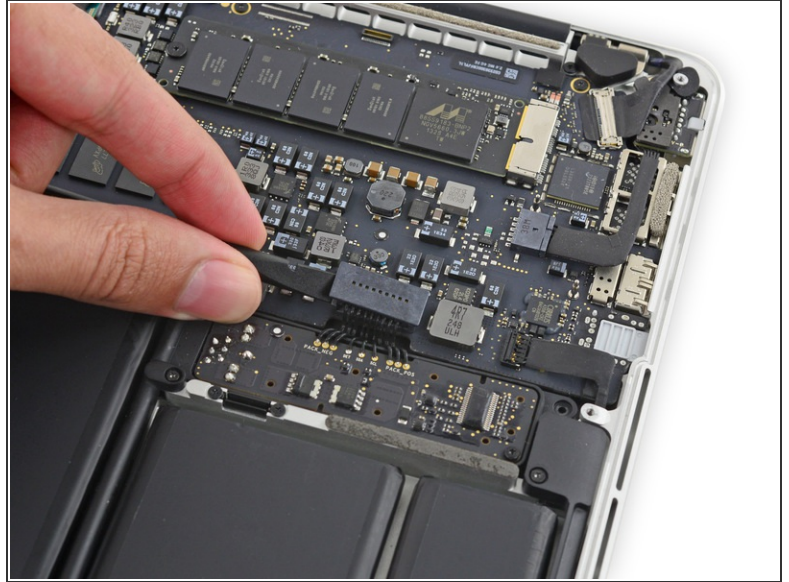

- Use the flat end of a spudger to lift the battery connector straight up out of its socket on the logic board.


⚠ Be sure you lift up only on the connector itself, **not** the socket, or you risk permanent damage to the logic board.

Step 6




- ☑ Bend the battery connector up out of the way to prevent accidental contact with its socket during your repair.

Step 7 — Right Speaker

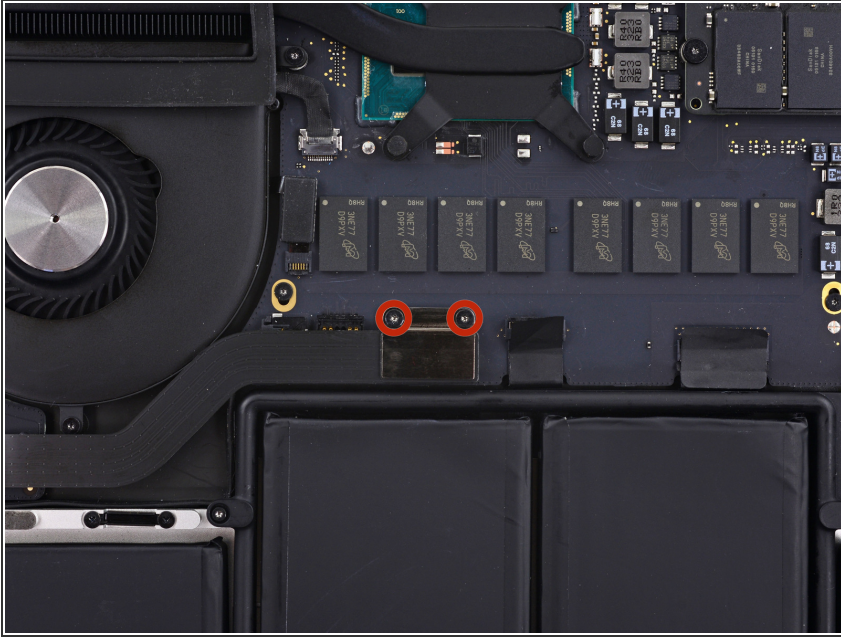

- Remove the two 2.1 mm T5 Torx screws securing the logic board end of the I/O board cable bracket.

Step 8

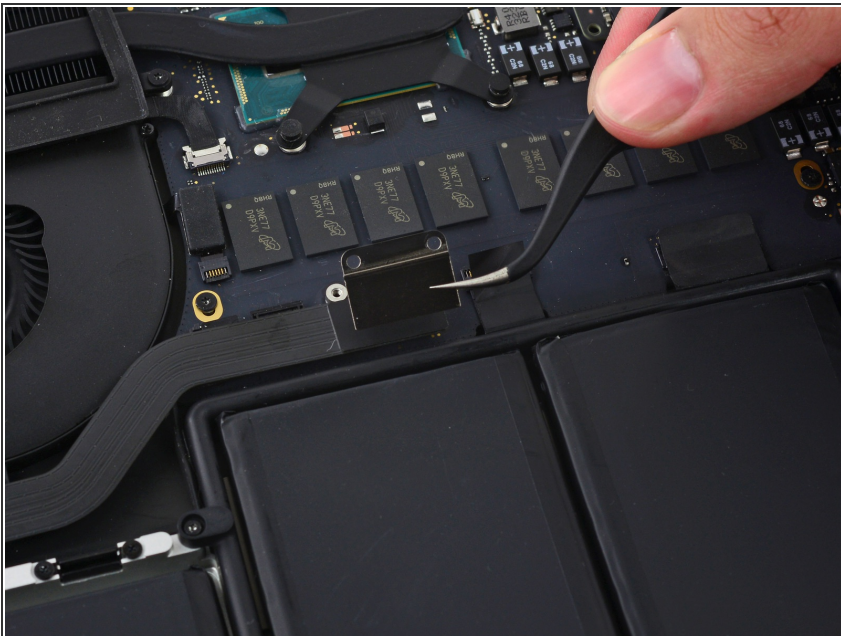

- Grasp the I/O board cable bracket with a pair of tweezers and remove it from the MacBook.

Step 9



- Use the flat end of a spudger to pop the I/O board connector straight up off its socket on the logic board.

⚠ Be careful to only pry up on the I/O board cable, **not** on the socket itself or you risk damaging your logic board.



Step 10



- Lift the logic board end of the I/O board cable straight up to bend it out of the way.


⚠ To avoid damage to the cable, fold only at the bend in the I/O board end of the cable.

Step 11

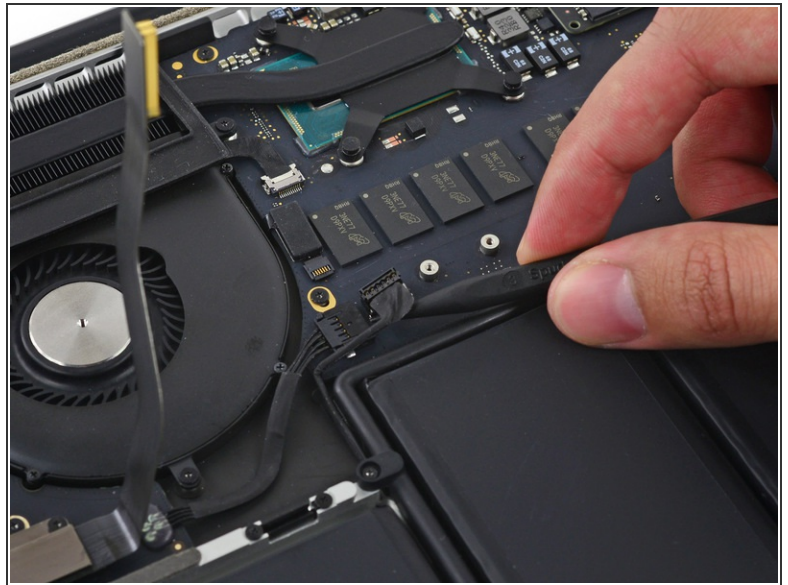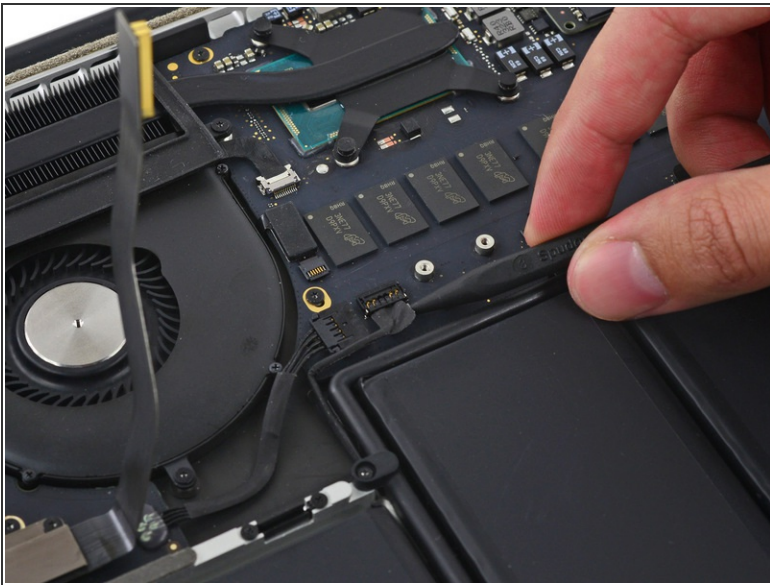


- Carefully tuck the tip of a spudger under the right speaker cable near the connector and lift it up out of its socket on the logic board.

Step 12

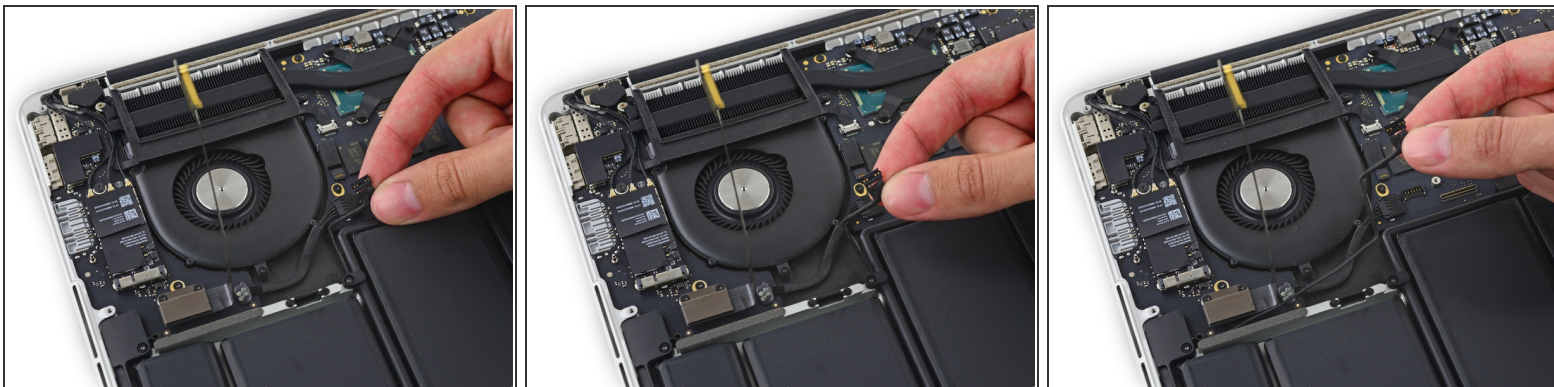


- Carefully peel the right speaker cable off the upper case.

Step 13

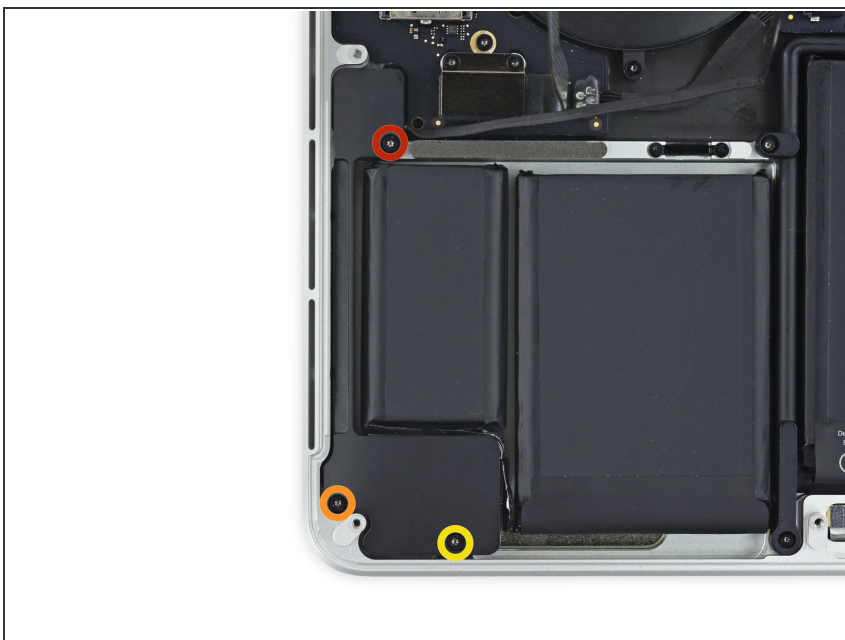


- Remove the following screws securing the right speaker to the upper case:
 - One 5.7 mm T5 Torx screw
 - One 6.5 mm T5 Torx screw
 - One 3.8 mm T5 Torx screw

Step 14

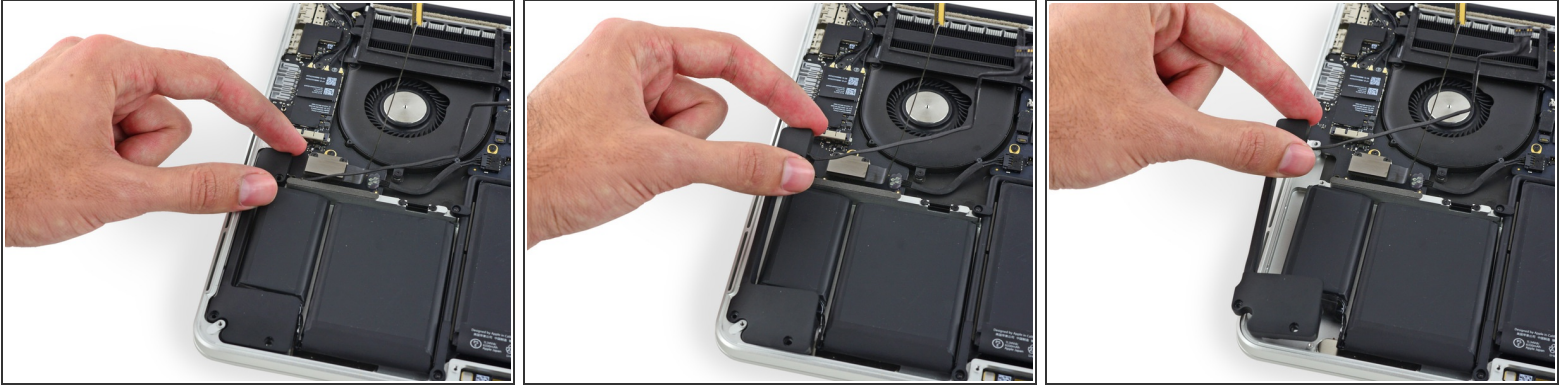


- Lift the right speaker from the cable end and pull it free from the case.

Step 15 — Left Speaker

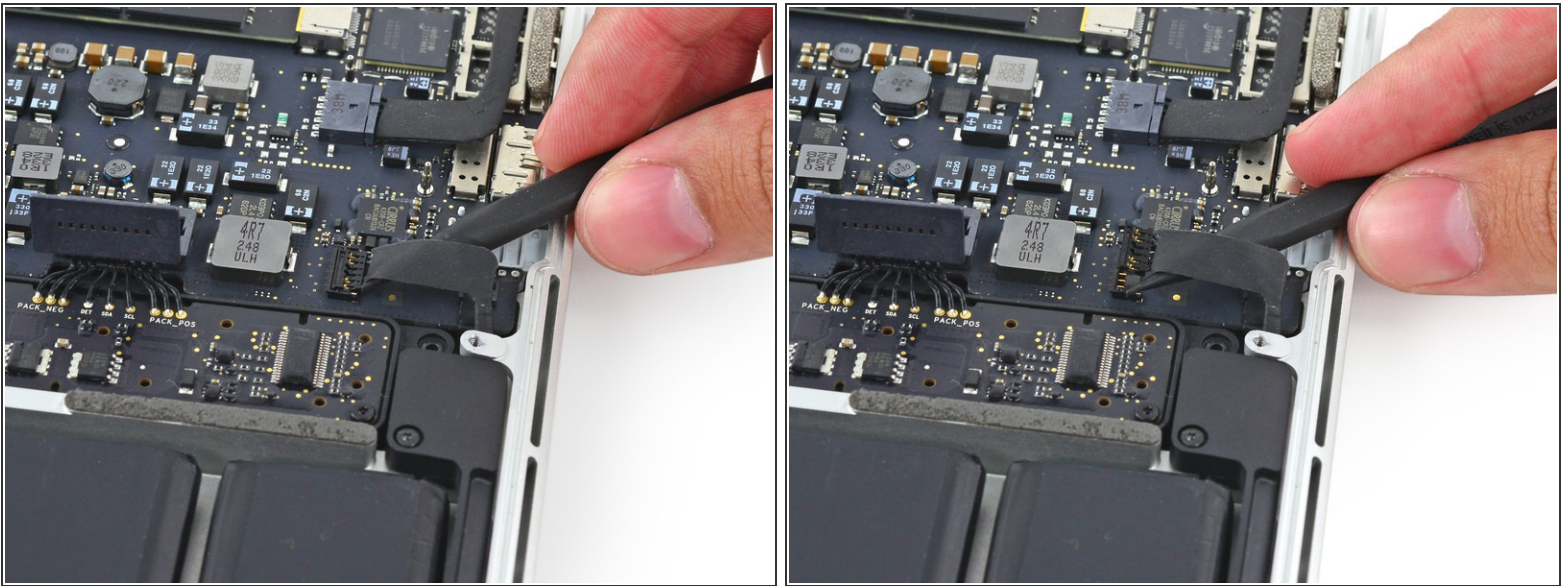

- Insert the tip of a spudger under the left speaker cable near the connector and lift it up out of its socket on the logic board.

Step 16

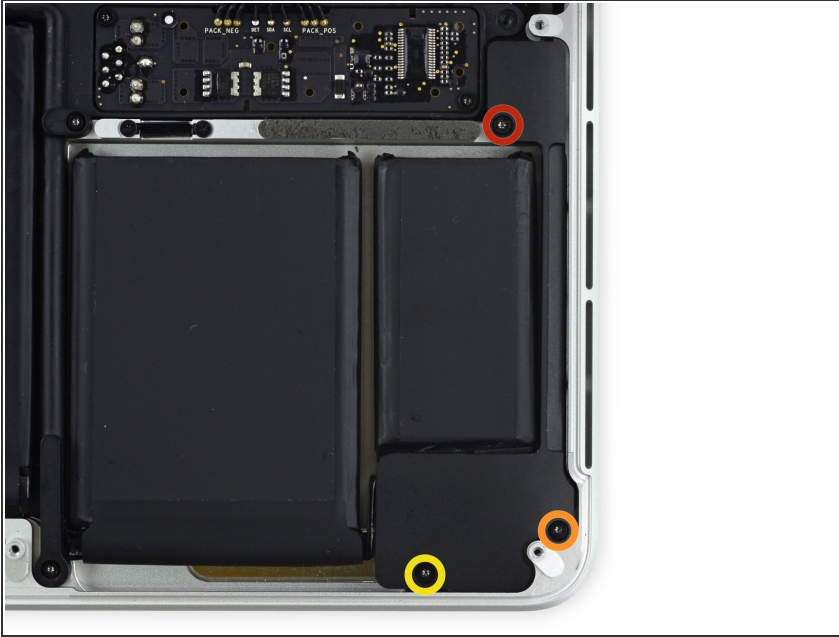

- Remove the following screws securing the left speaker to the upper case:
 - One 5.7 mm T5 Torx screw
 - One 6.5 mm T5 Torx screw
 - One 3.8 mm T5 Torx screw

Step 17





- Lift the corner of the left speaker up and slide it out the battery to remove it from the upper case.

⚠ Be careful **not** to snag the speaker cable on the screw hole post in the side of the case.

Step 18 — iOpener Heating



-  We recommend that you clean your microwave before proceeding, as any nasty gunk on the bottom may end up stuck to the iOpener.
- Place the iOpener in the center of the microwave.
-  For carousel microwaves: Make sure the plate spins freely. If your iOpener gets stuck, it may overheat and burn.

Step 19




- Heat the iOpener for **thirty seconds**.
- Throughout the repair procedure, as the iOpener cools, reheat it in the microwave for an additional thirty seconds at a time.

- ⚠ Be careful not to overheat the iOpener during the repair. Overheating may cause the iOpener to burst.
- ⚠ Never touch the iOpener if it appears swollen.
- ⚠ If the iOpener is still too hot in the middle to touch, continue using it while waiting for it to cool down some more before reheating. A properly heated iOpener should stay warm for up to 10 minutes.


Step 20



- Remove the iOpener from the microwave, holding it by one of the two flat ends to avoid the hot center.

 The iOpener will be very hot, so be careful when handling it. Use an oven mitt if necessary.

Step 21 — Battery

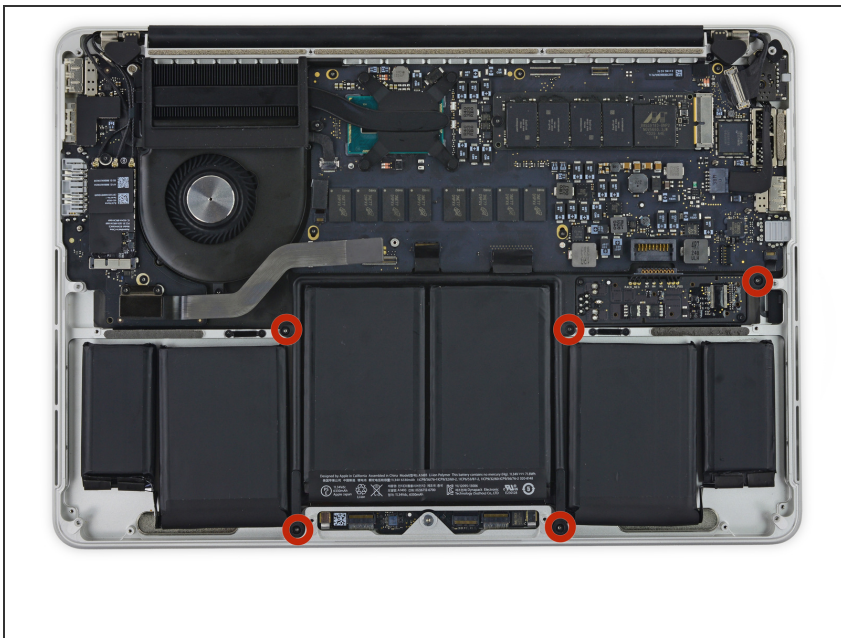

- Remove the five 3.7 mm T5 Torx screws securing the battery to the upper case.


Step 22




- ⓘ The liquid adhesive remover provided in your iFixit battery replacement kit can affect the antireflective coating on your MacBook Pro's display.
- To protect your display, place a sheet of aluminum foil between the display and keyboard and leave it there while you work.

Step 23



 If you have an iFixit battery kit with liquid adhesive remover, it's time to get it prepped.

- Alternatively, if you are using the hot iOpener method, skip the following three steps.

 iFixit adhesive remover contains acetone, a mild skin and eye irritant.

- Wear eye protection when handling and applying the adhesive remover. (Eye protection is included in your kit.)
- **Do not** wear contact lenses without eye protection.
- Protective gloves are also included in your kit. If you are concerned about skin irritation, put your gloves on now.

Step 24




- Open your container of adhesive remover.
- Fill the syringe included in your kit with a small amount (approximately 1-2 milliliters) of adhesive remover.
- ❗ It's best to fill the syringe with no more than about 1-2 milliliters of adhesive remover at a time, so as to avoid accidentally applying too much.
- Refill your syringe as needed throughout the rest of this procedure.

Step 25



- Apply a small amount of adhesive remover (approximately 1 ml) evenly under the edge of the rightmost battery cell.
- Wait 2-3 minutes for the liquid adhesive remover to penetrate underneath the battery cell before you proceed to the next step.


Step 26

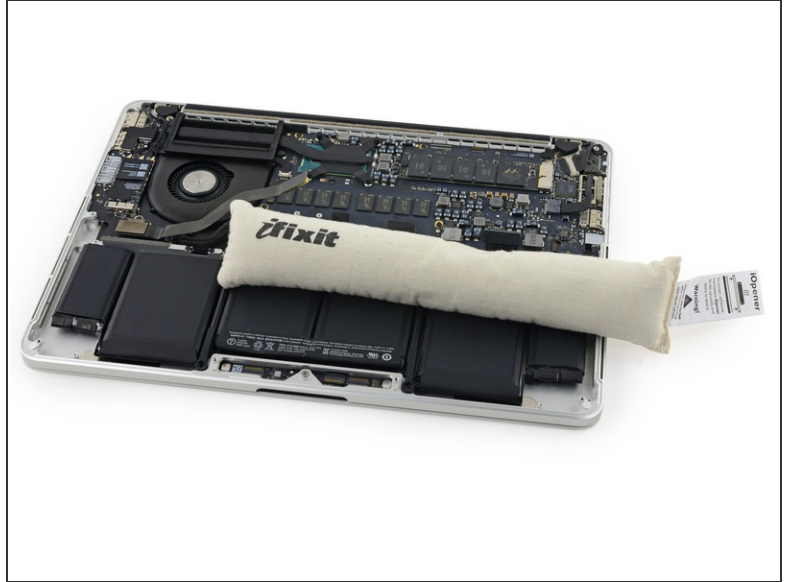

i If you don't have a liquid adhesive remover, you'll be using a [hot iOpener](#) to warm and soften a section of the adhesive securing the battery to the upper case, and then carefully prying at that point.


- Use the hot iOpener to cover half of the two right-most battery cells.
- After about a minute, reheat the iOpener and move it to cover the other half of the right-most battery cells.

Step 27

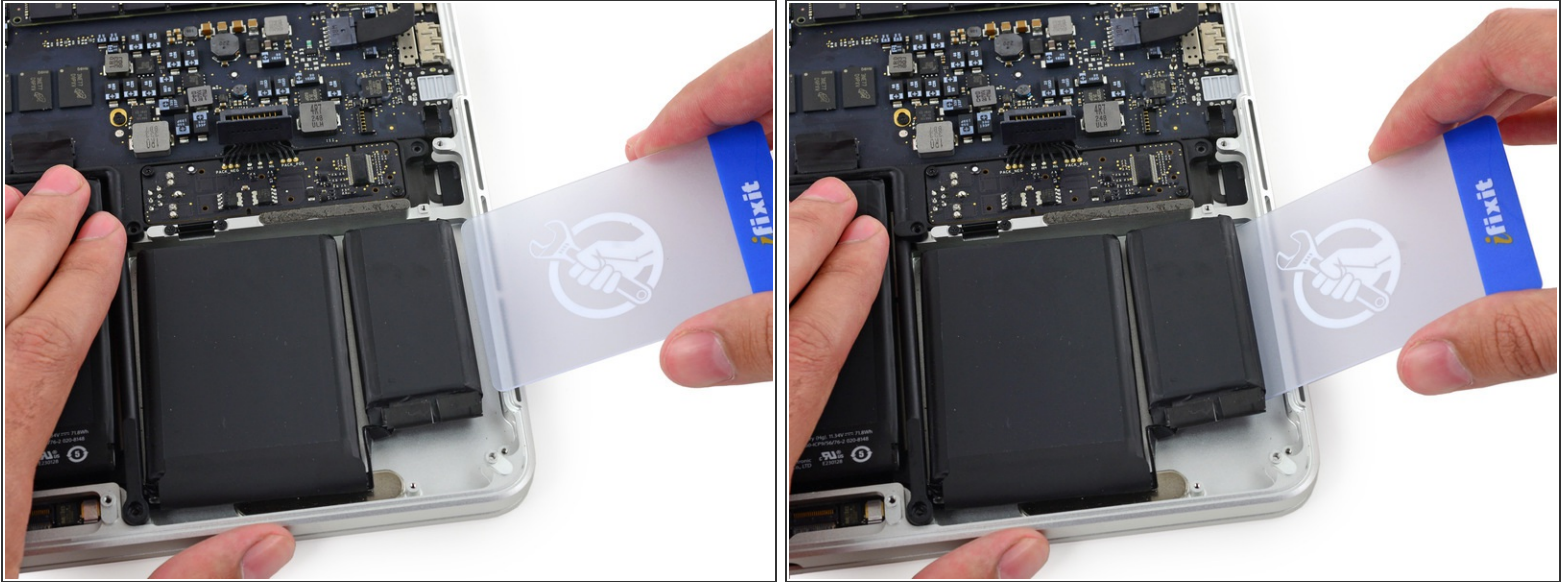

- Push a plastic card between the right-most battery cell and the upper case, cutting the adhesive between the two.
- ⚠ Throughout this procedure, be careful not to damage any of the battery cells with your tools. A damaged lithium-ion battery may leak dangerous chemicals and/or catch fire. Use only plastic pry tools.
- When using the hot iOpener method, if you encounter significant resistance to prying, stop and use the iOpener to reheat the section you're working on.

Step 28

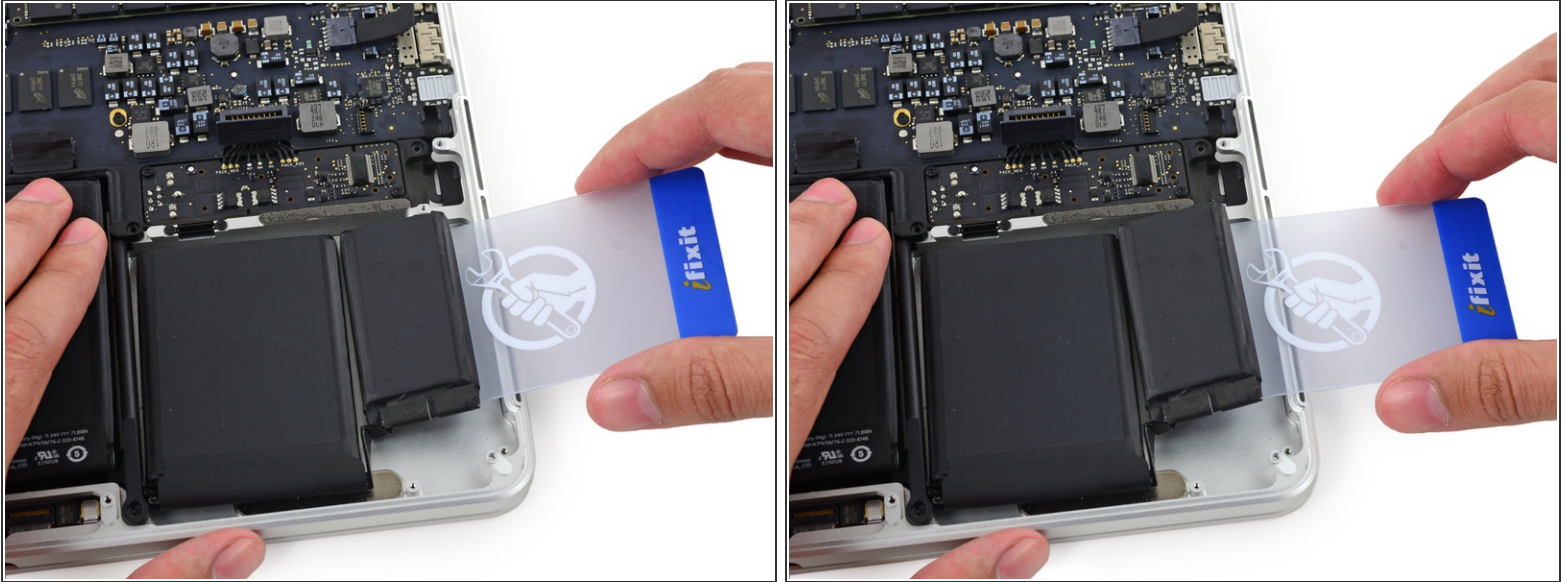

- Use the plastic card to pry the right-most battery cell up from the rear case.

Step 29




- Repeat this procedure with the adjacent battery cell:
 - Apply a small amount (about 1 ml) of liquid adhesive remover under the battery cell, and wait 2-3 minutes for it to penetrate and soften the adhesive.
 - Alternatively, re-heat this section with your iOpener if needed.
 - Push a plastic card about an inch between the battery cell and the upper case, and slowly pry the cell up to separate all of the adhesive.

Step 30



- Temporarily leave your plastic card underneath the two rightmost battery cells to prevent them from re-adhering to the upper case.
- If using an iOpener, reheat it and reapply it, this time to the left-most battery cells.
- ⓘ Again, leave the iOpener in each position for about a minute, reheating in between, to heat each half of the left-most battery cells.

Step 31

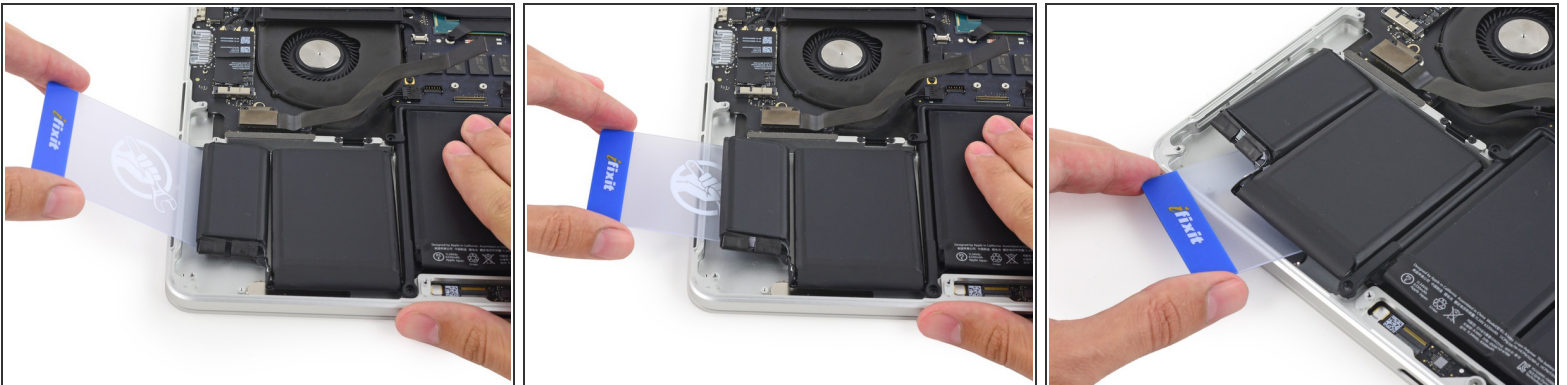

- Repeat the above procedure to separate the two leftmost battery cells from the upper case.
- Remember to apply a small amount (about 1 ml) of adhesive remover to each battery cell, and wait 2-3 minutes for it to penetrate and soften the adhesive.
- Use a second plastic card to separate the two leftmost battery cells from the upper case.


Step 32



- Leave the second card in the corner between the two left cells.

i In the following steps, you can either use a third card, or the card from the right corner. The right corner adhesive should be dry/cool enough that the cells can easily be pulled up again when needed.

Step 33

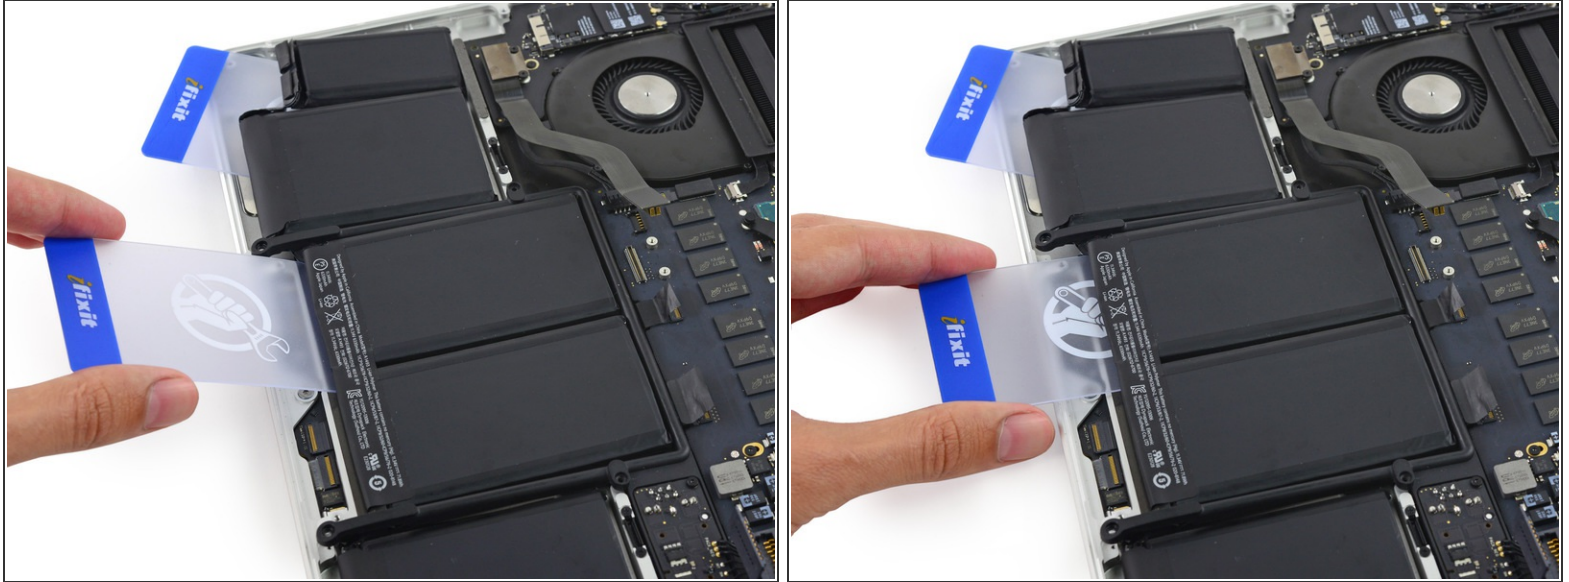



- To separate the adhesive securing the final two, middle battery cells, apply another 1 milliliter or so of liquid adhesive remover (or your iOpener) to each cell.
- It may help to elevate one side of your MacBook Pro a few inches so that the adhesive remover flows in the correct direction, underneath the battery cells. You can use a sturdy book or foam block to prop up one side of your MacBook Pro while you work.
- Insert the card about an inch between the left-center battery cell and the upper case, separating the adhesive between the cell and the case.

Step 34





- Pull the card back out and insert it about an inch between the right-center battery cell and the upper case, separating the adhesive between the cell and case.

Step 35

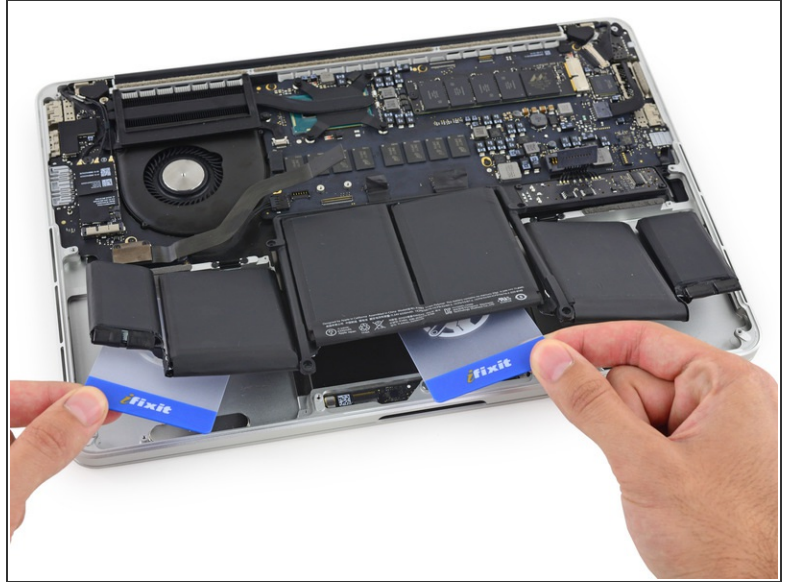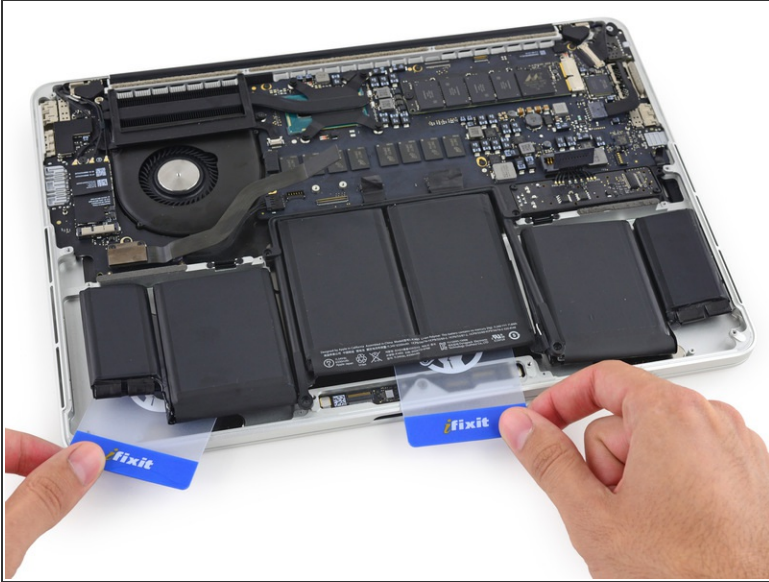


- i** By this point, the outer cells should be free, and you should only encounter resistance from the two center cells. If this is not the case, go back and completely loosen the four outer-most cells from the upper case.
- Pry up on the two center cells to separate the last of the adhesive and lift the battery from the device.

Step 36

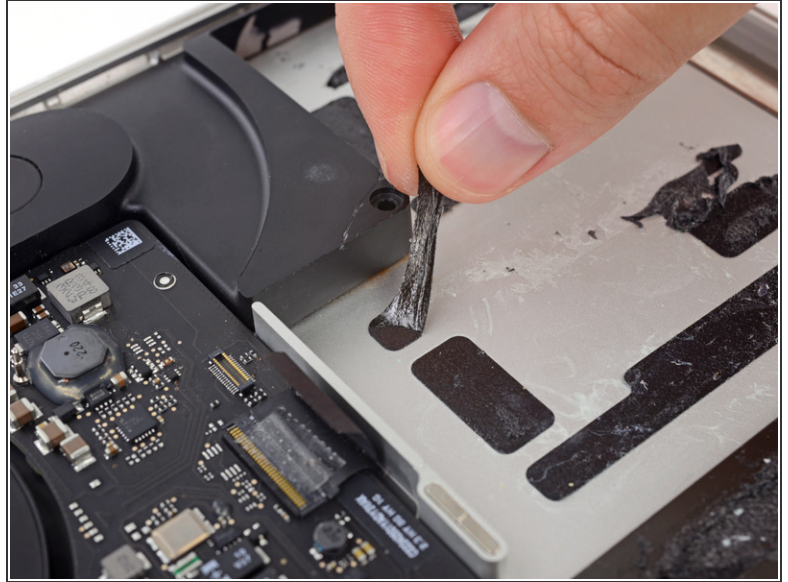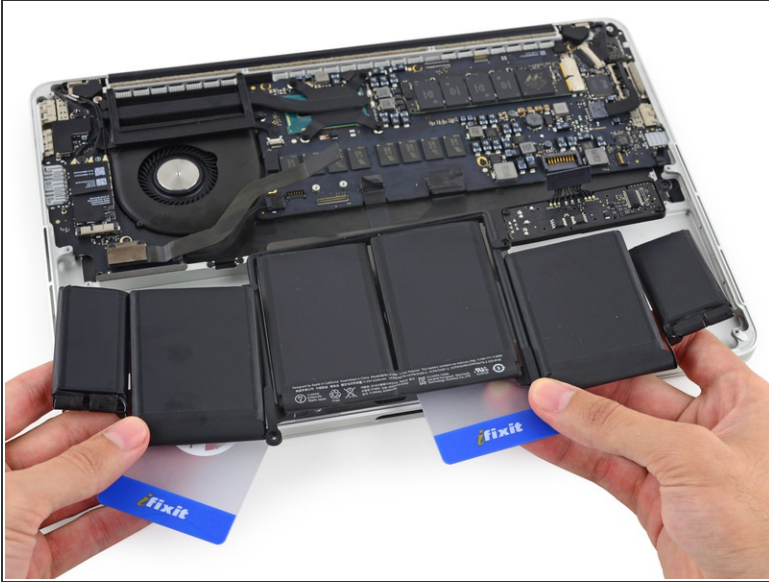


- Remove the battery.
- ☑ Before installing your new battery, remove all the old adhesive from the MacBook Pro's case.
 - With a little luck, you can slowly pull out each strip of adhesive with your fingers.
 - Otherwise, soak each section of adhesive with a bit of adhesive remover for 2-3 minutes, and then scrape it out with an opening pick or one of the other tools in your kit. This can take quite a bit of work, so be patient.
 - Mop up any remaining adhesive remover and give your MacBook Pro a few minutes to air dry.
- ☑ The replacement battery included in your iFixit kit comes with adhesive pre-installed. Test the battery's fit and alignment carefully before peeling off the film covering the adhesive, and then press each cell firmly into place. If any additional films/liners are present that weren't on your original battery, remove them now.
- Calibrate your battery before using it: allow it to drain overnight, then charge it to 100% and drain it again until your MacBook Pro shuts down automatically. Charge it again and use it normally.
- ⚠ If you notice any unusual behavior or problems after installing your new battery, you may need to [reset your MacBook Pro's SMC](#).


Step 37 — Trackpad

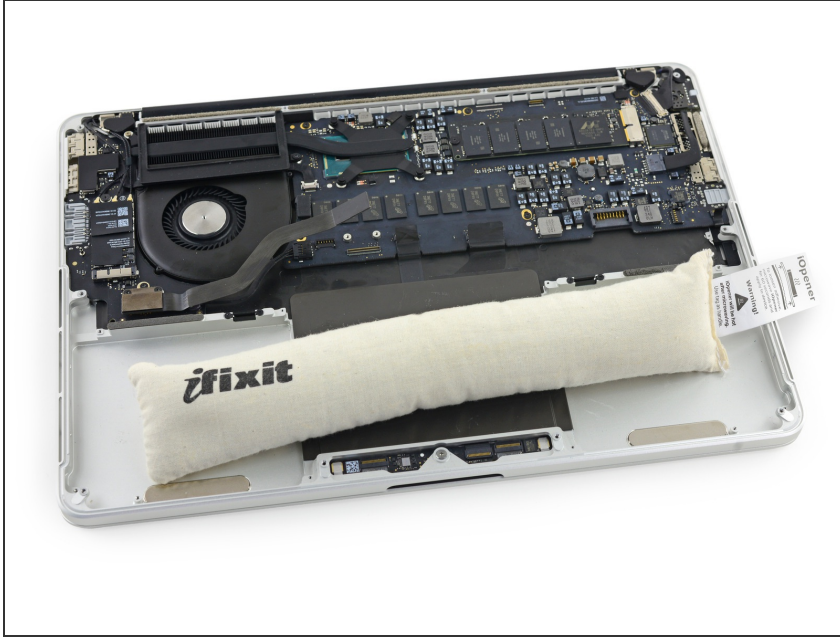

- Place a reheated iOpener over the trackpad cover plate to soften the adhesive securing it to the upper case.

 Be careful **not** to overheat the iOpener during the repair. Always wait at least two minutes before reheating the iOpener.

Step 38

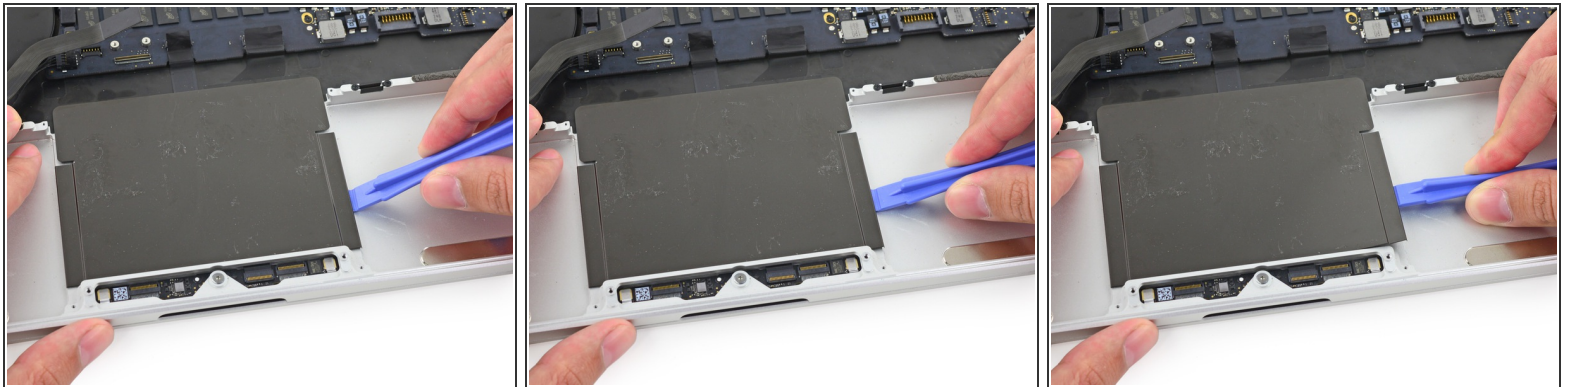

- Use a plastic opening tool to carefully pry the trackpad cover plate up from the upper case.


 Go slowly and carefully to avoid putting any visible creases in the plate.

Step 39



- Use a plastic opening tool to slowly and carefully peel the trackpad cover plate up off the upper case.

Step 40

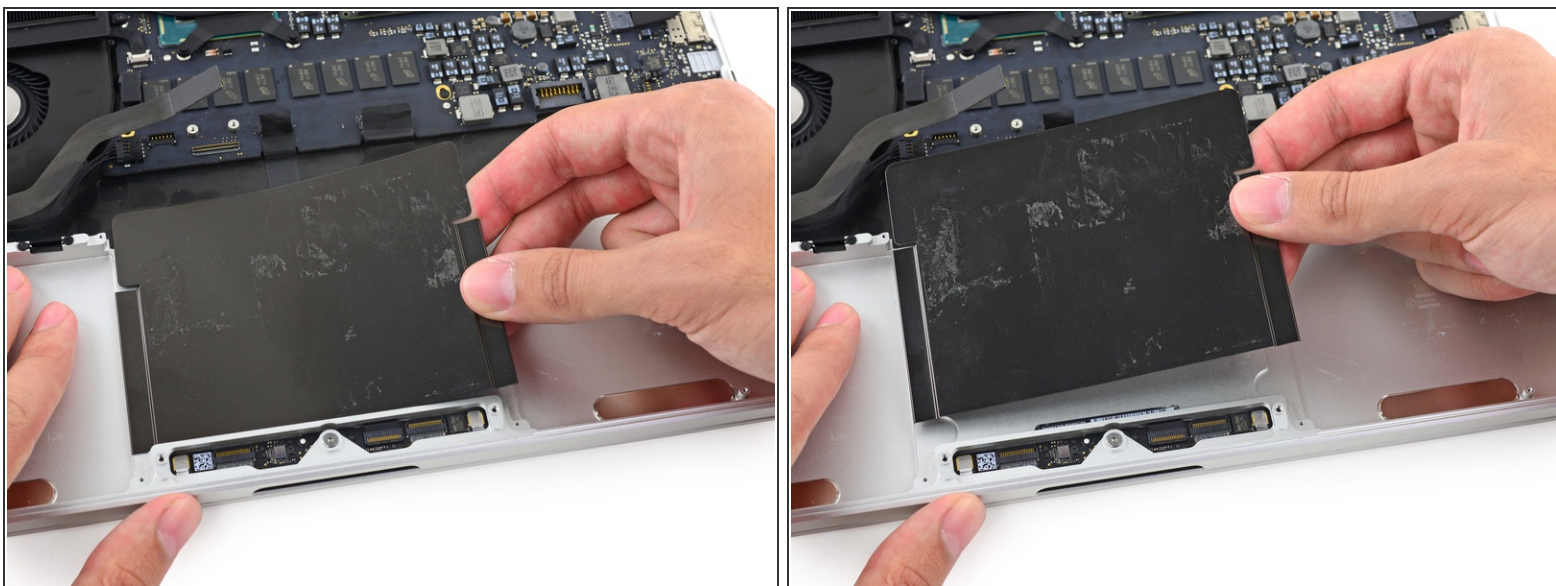



- Gently peel the plate up to remove it.

Step 41



i If necessary, peel back any tape covering the trackpad cable connector.

Step 42

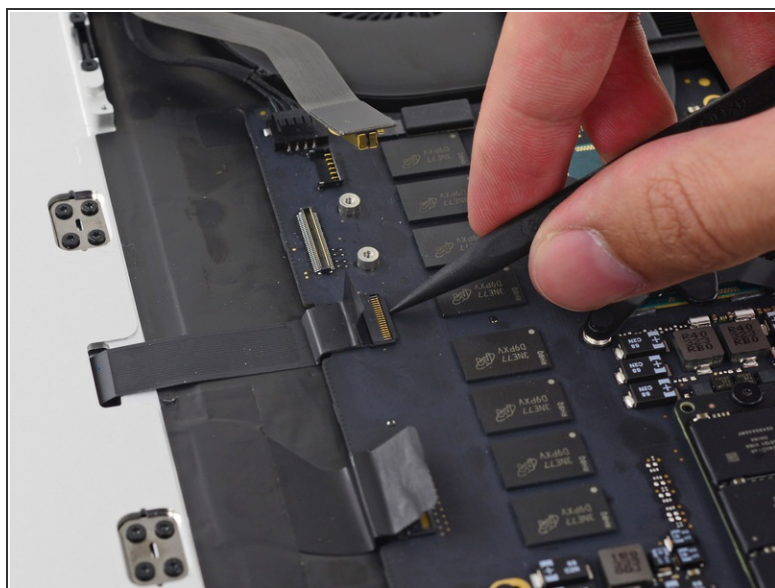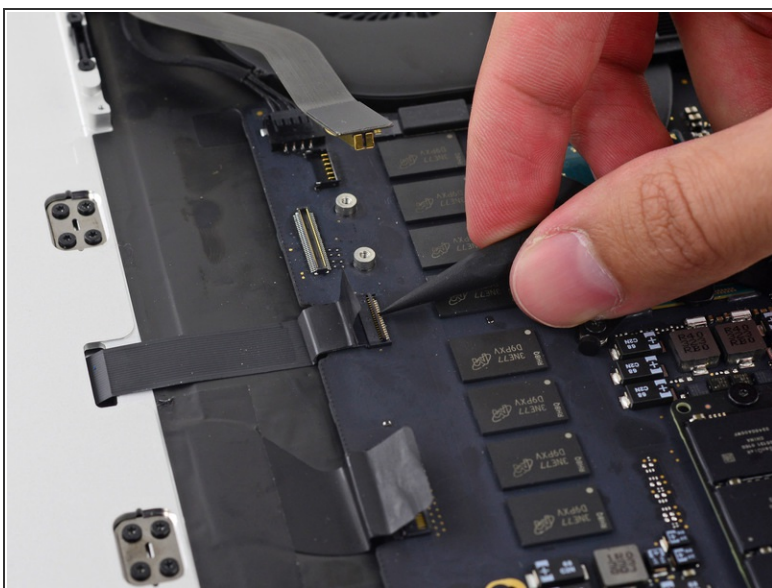


- Use the tip of a spudger to flip the retaining tab on the ZIF connector.

Step 43




- Pull the trackpad ribbon cable straight out of its socket on the logic board.

Step 44

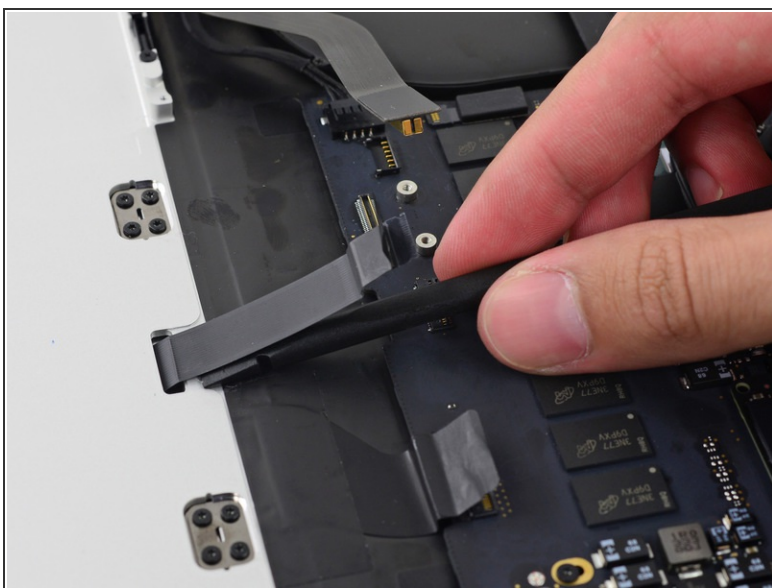



- Wedge the flat end of a spudger underneath the upper case opening where the trackpad ribbon cable passes is routed through.
- Gently pry the trackpad ribbon cable from the adhesive securing it to the upper case.

Step 45

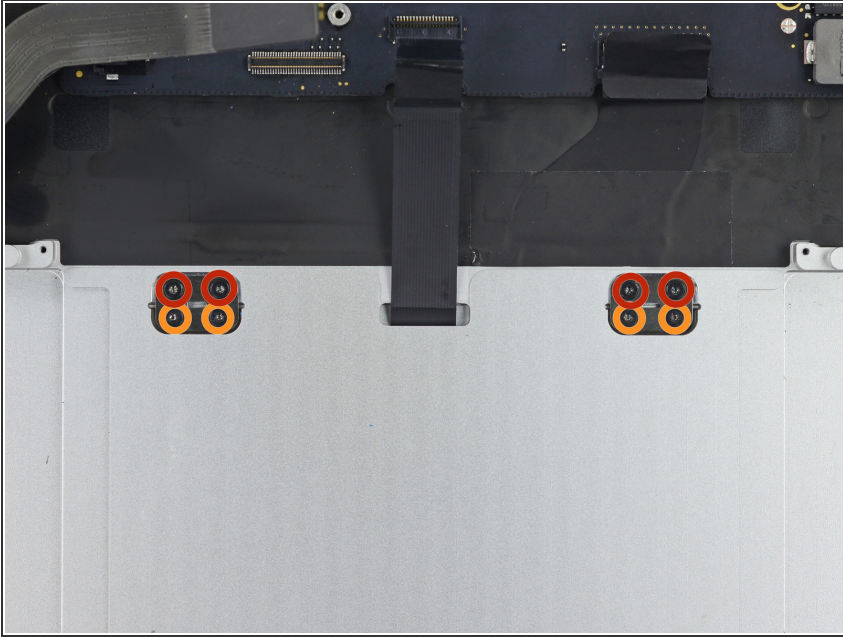


- Remove the following screws securing the trackpad brackets to the trackpad and upper case.
 - Four 2.2 mm T5 Torx screws
 - Four 1.7 mm T5 Torx screws

Step 46

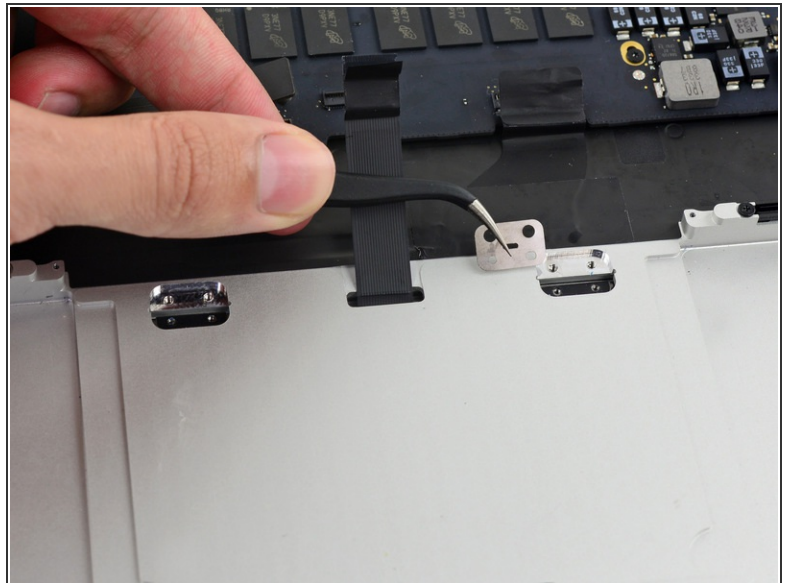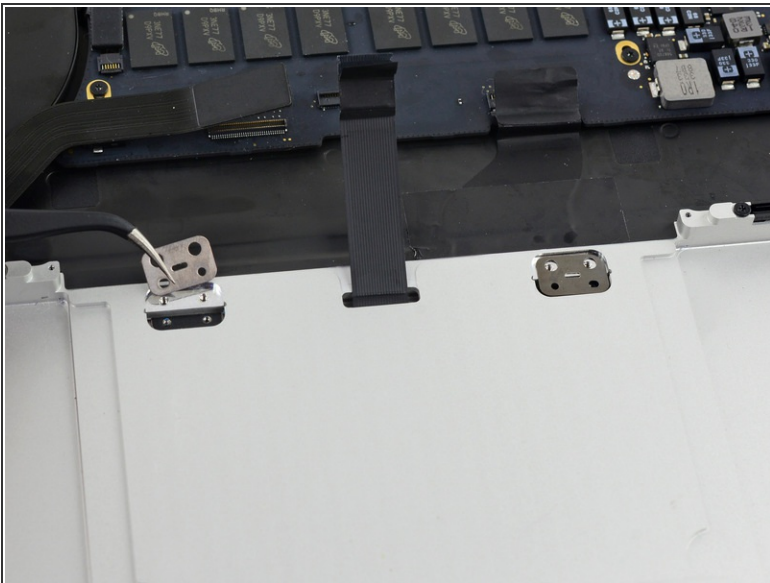

- Use tweezers to remove the two trackpad mounting brackets from the upper case.

Step 47

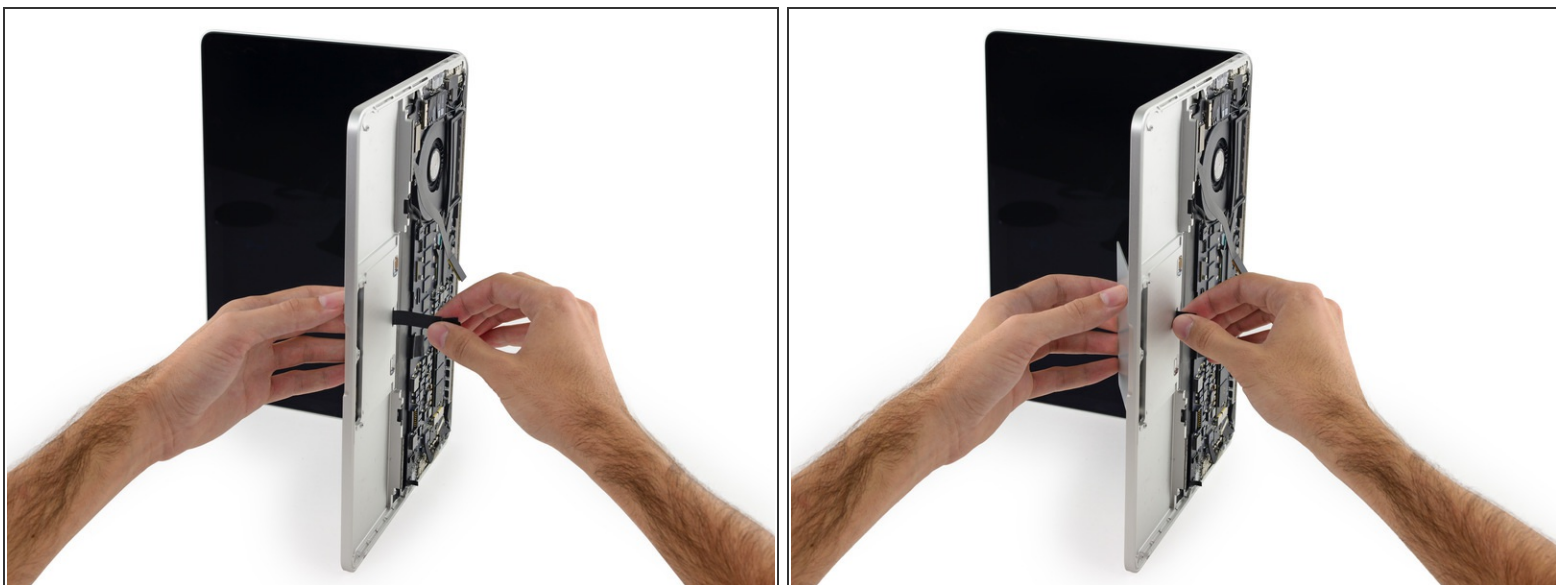

✦ To avoid scratching the display, open the computer about 90° and set it on end.

- Carefully guide the trackpad ribbon cable through the slot cut in the upper case.

i This will push the trackpad up out of its recess in the top of the upper case.


- Guide the trackpad out of the upper case with your other hand, so it doesn't fall.

Step 48




- Gently pull the trackpad away from the upper case, being careful not to snag the ribbon cable.

Step 49 — MagSafe DC-In Board

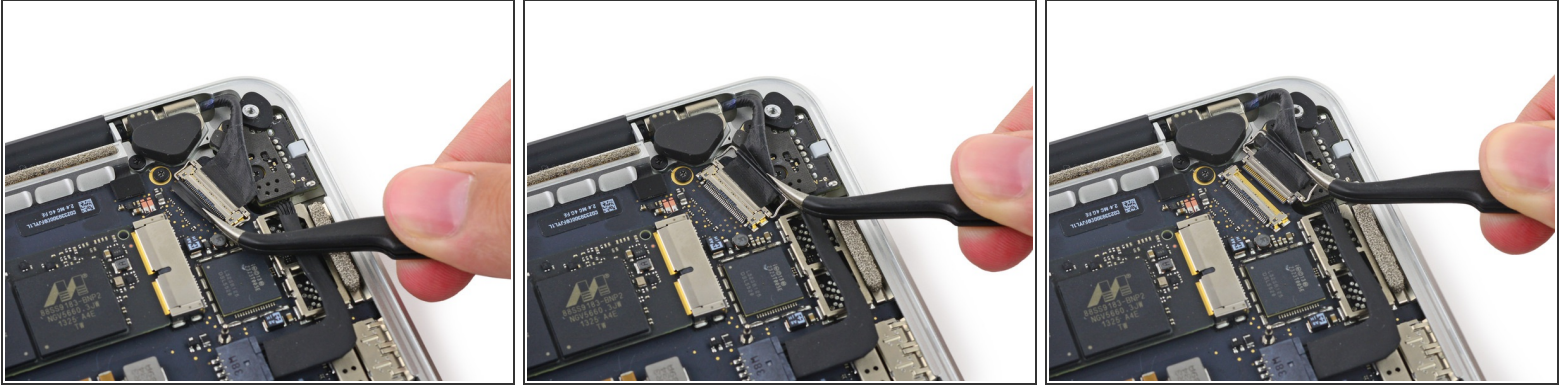


- Grab the black plastic tab to flip the display cable connector open and pull it straight out of its socket on the logic board.

Step 50

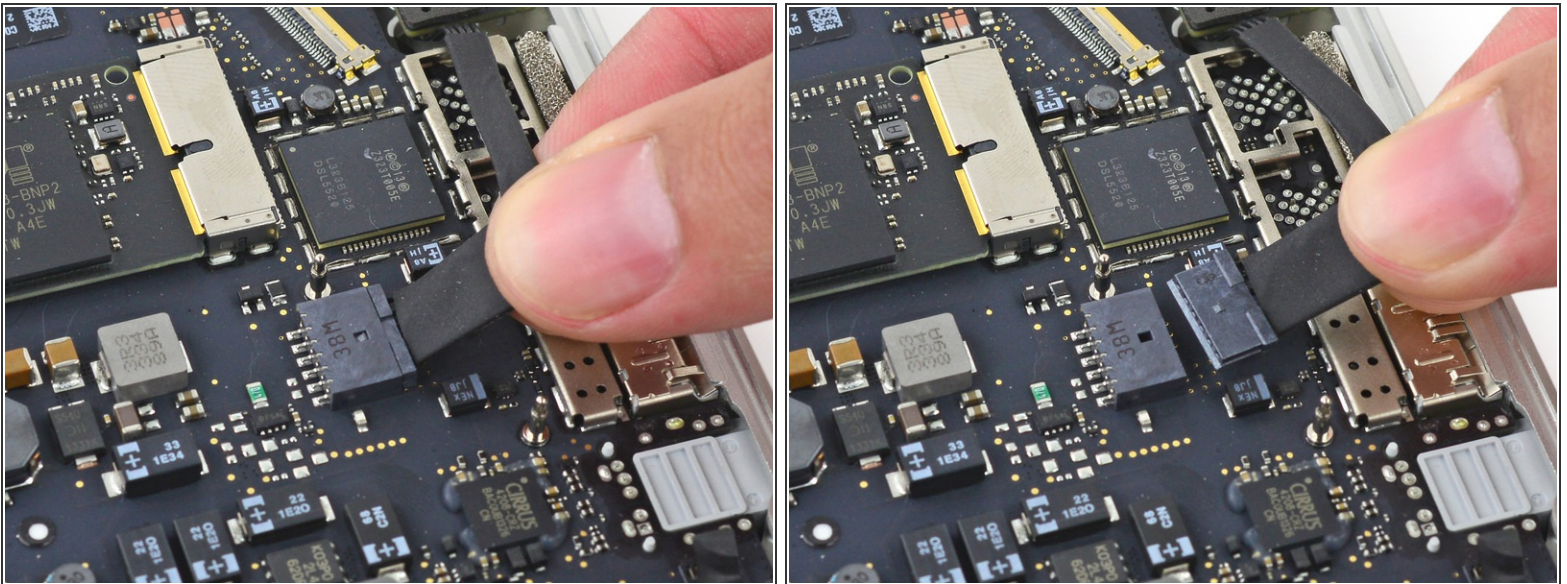


- Pull the DC-In board connector straight out of its socket on the logic board.

Step 51

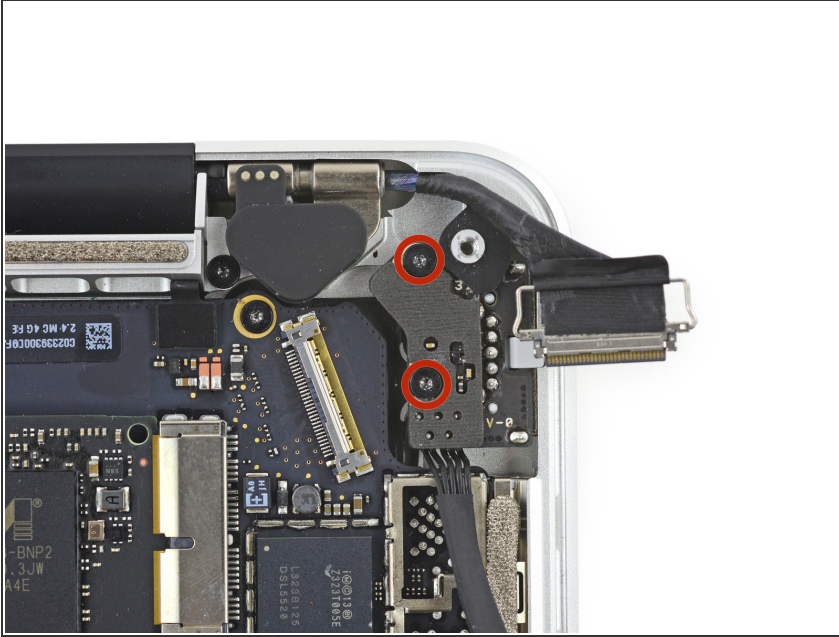


- Remove the two 3.5 mm T5 Torx screws securing the MagSafe DC-In board to the upper case.
- ⓘ You may need to gently push the display cable out of the way to expose the screws.

Step 52

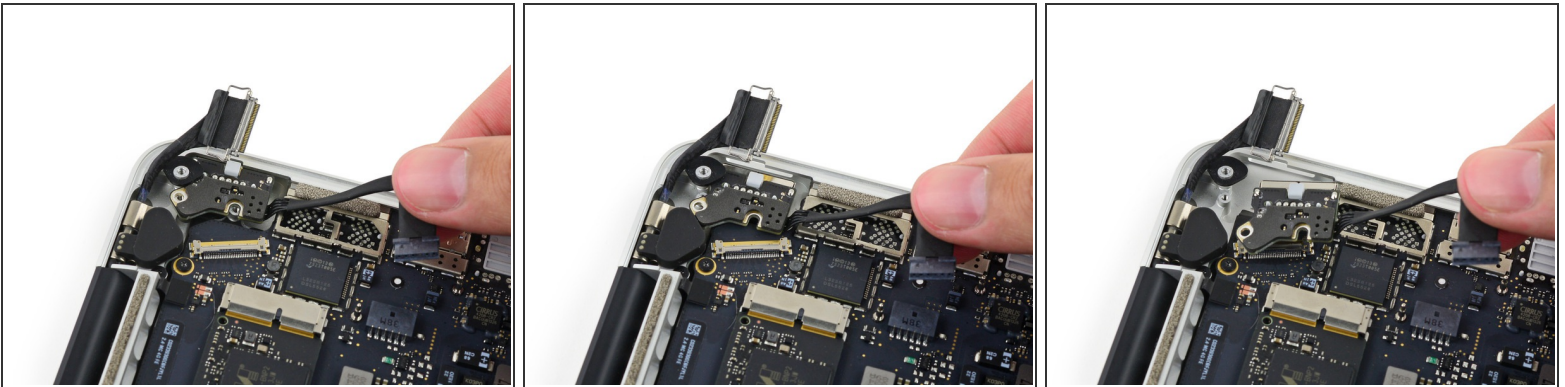


- Use the MagSafe DC-In board cable to pull the board out and up from the upper case to remove it.

Step 53 — Upper Case

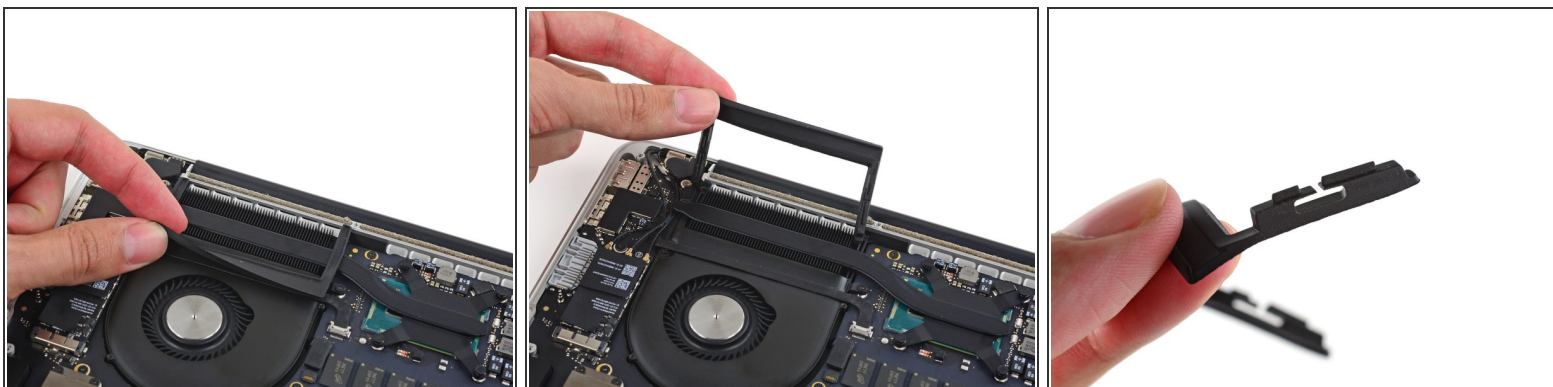


- Carefully remove the rubber fan bumper from the edge of the heat sink.
- ⓘ The fan bumper wraps around the heat sink and fits into slots in the fan duct. During reassembly, be sure to fit the tabs into the notches in the fan duct.

Step 54

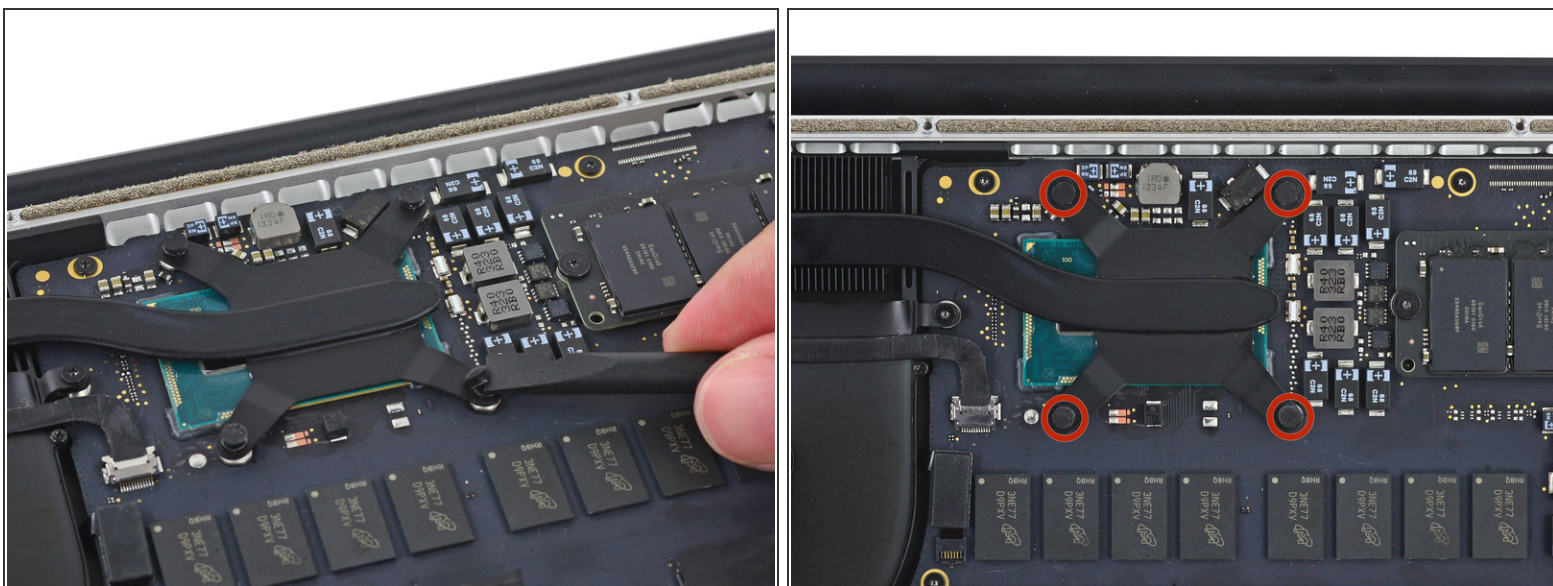



- Use the flat end of a spudger to peel the four foam stickers off of the heat sink screws.

Step 55

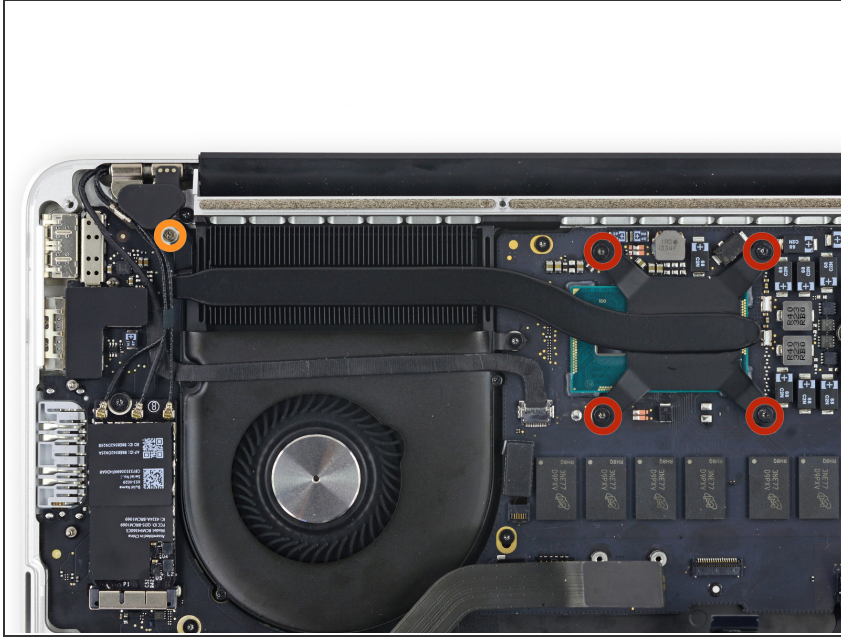



- Remove the following screws securing the heat sink:
 - Four 2.6 mm T5 screws
 - One 2.4 mm Phillips #000 screw
- ⓘ In the Early 2015 model, this is a silver 2.7 mm T5 screw.

Step 56

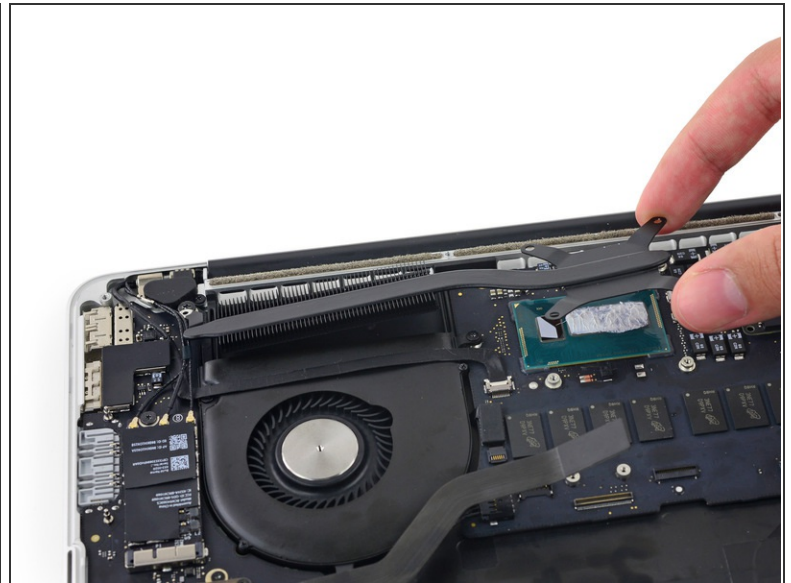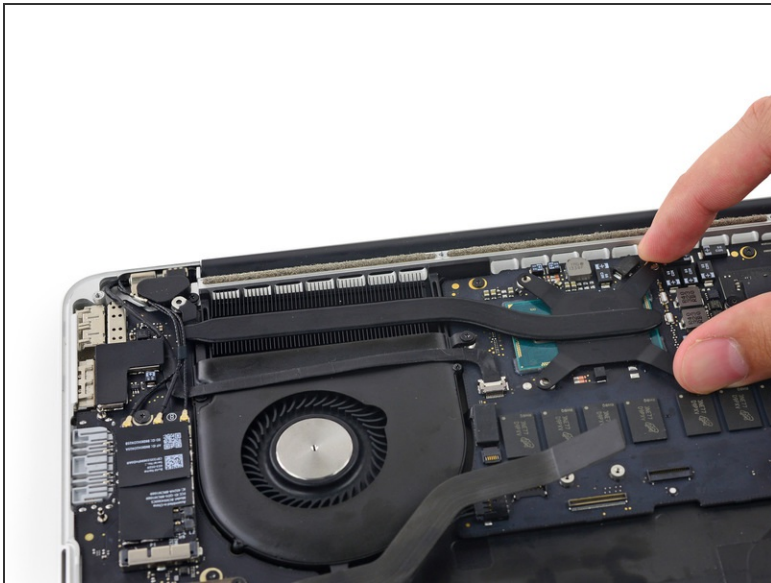



- Remove the heat sink from the laptop.
- ✦ Use the [thermal paste application guide](#) to reapply the thermal paste before reassembly.

Step 57

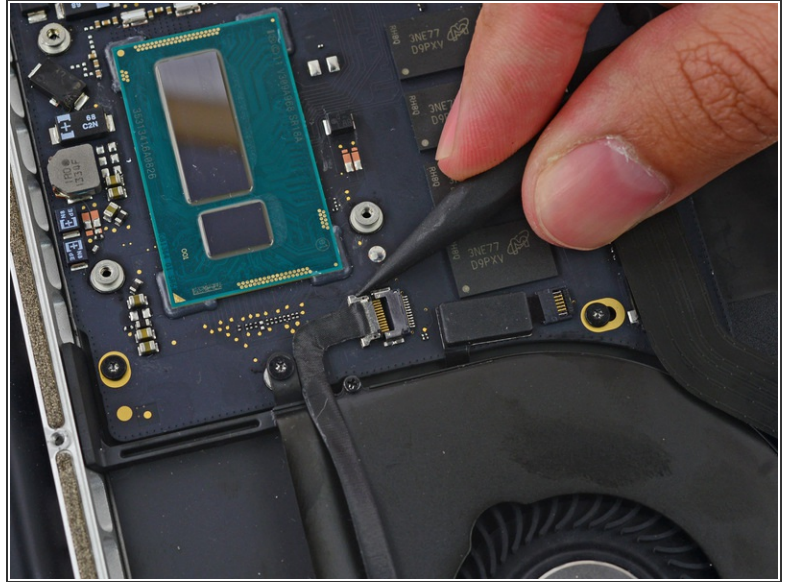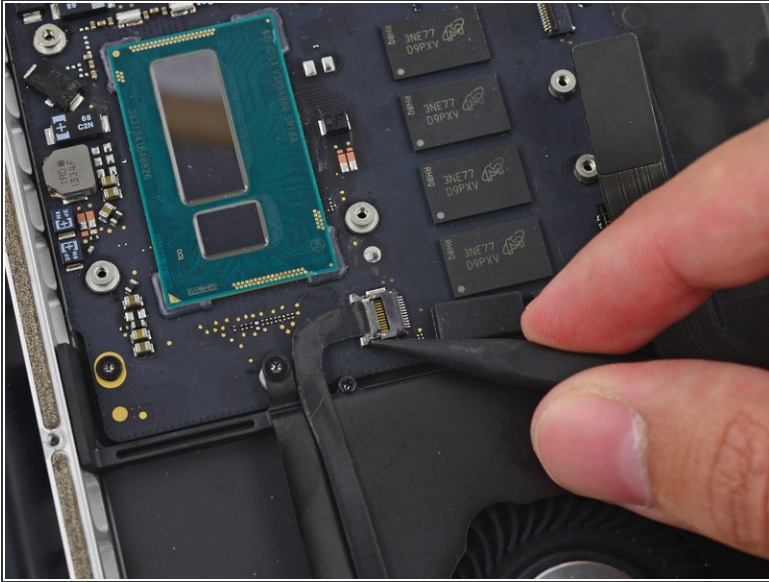


- Use the tip of a spudger to push on either side of the the iSight camera cable connector and *walk* it out of its socket on the logic board.

Step 58

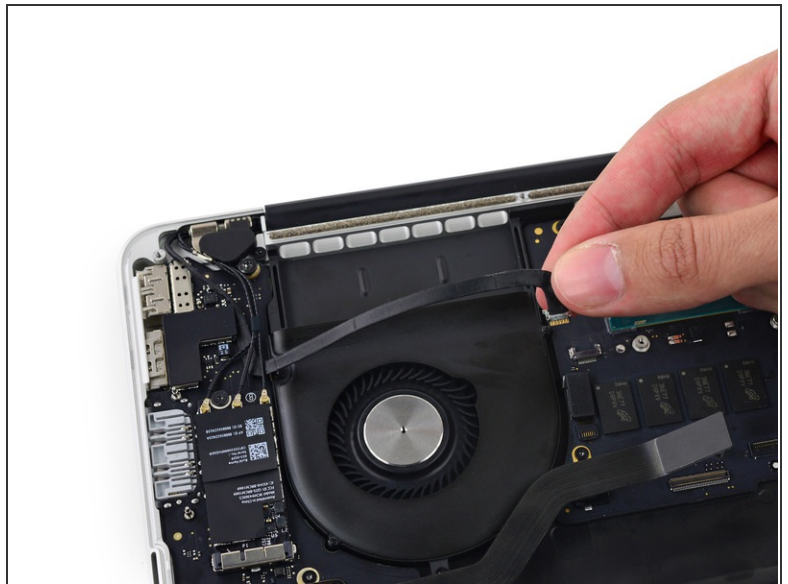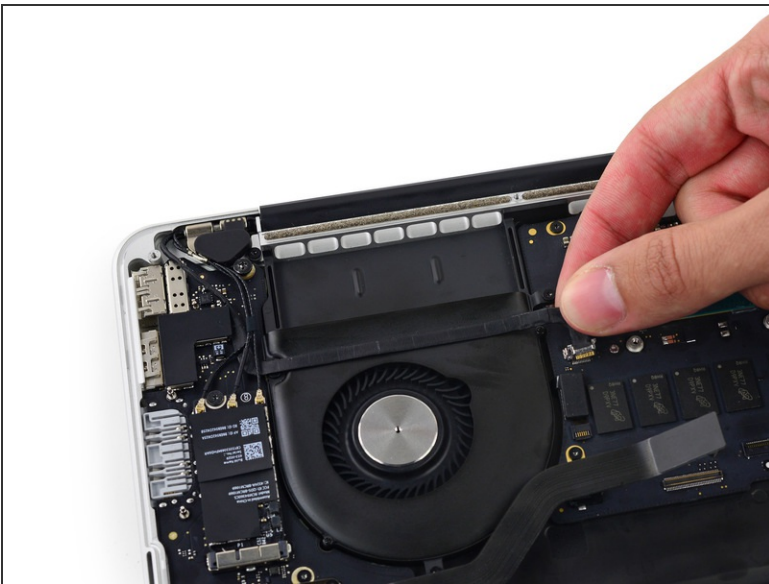


- Peel the iSight camera cable up off the fan housing to fold it out of the way.

Step 59

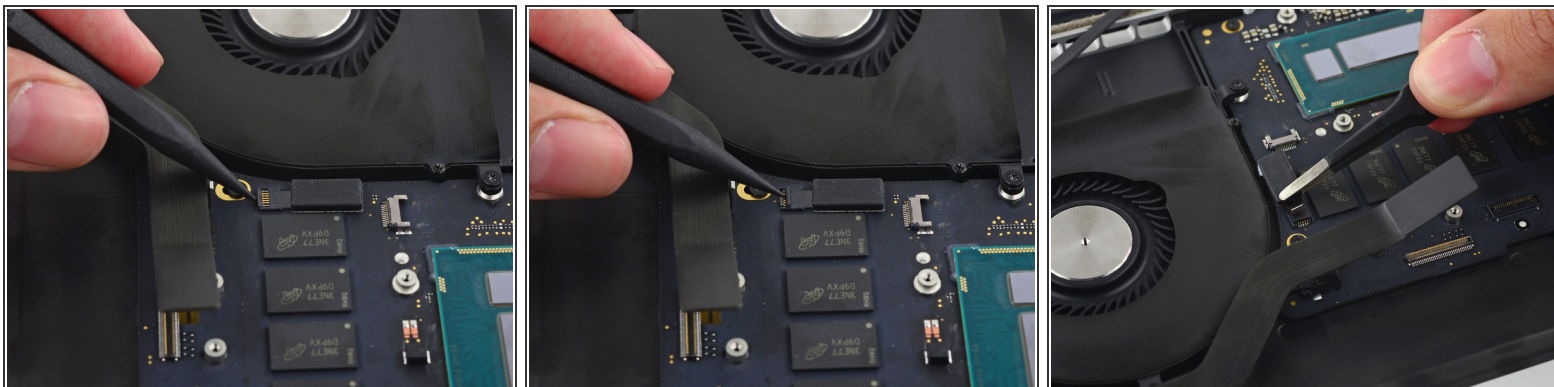


- Use the tip of a spudger to flip the tab on the fan's ZIF connector.
- Carefully pull the fan cable from its connector.

Step 60

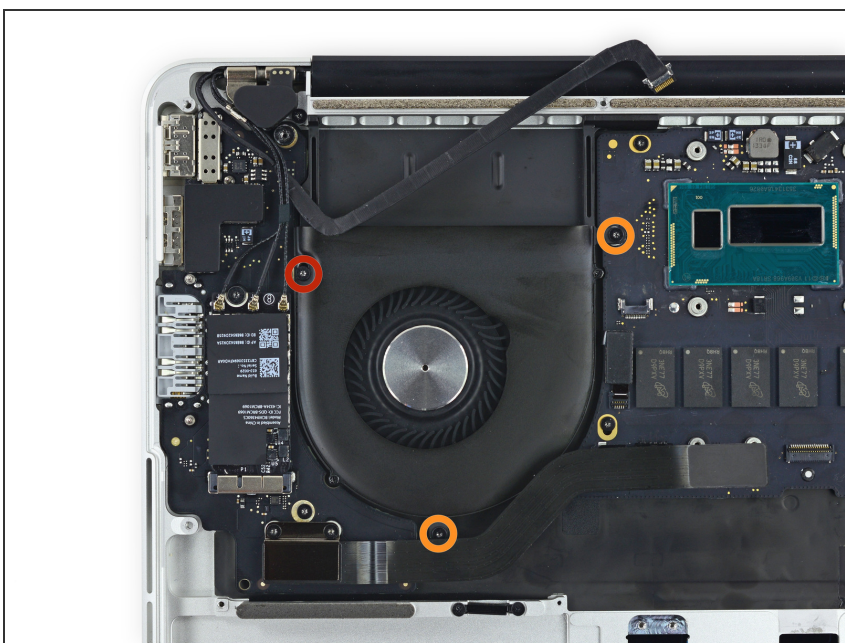


- Remove the following screws securing the fan to the upper case:
 - One 5.0 mm T5 Torx screw
 - Two 3.6 mm T5 Torx screws

Step 61

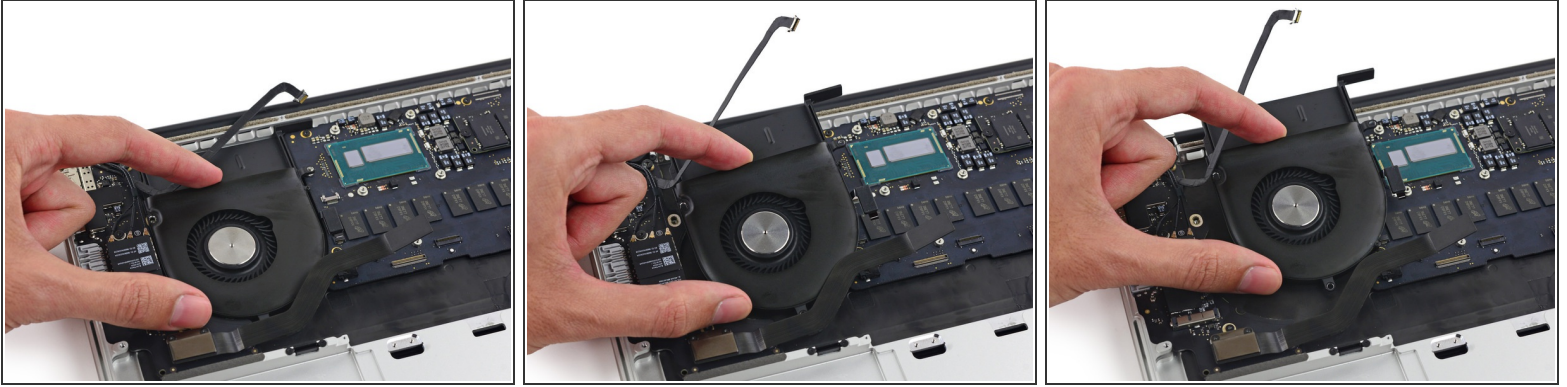

- Lift the end of the fan from the heat sink cavity and pull it up and out toward the hinge of the laptop to remove it.

Step 62

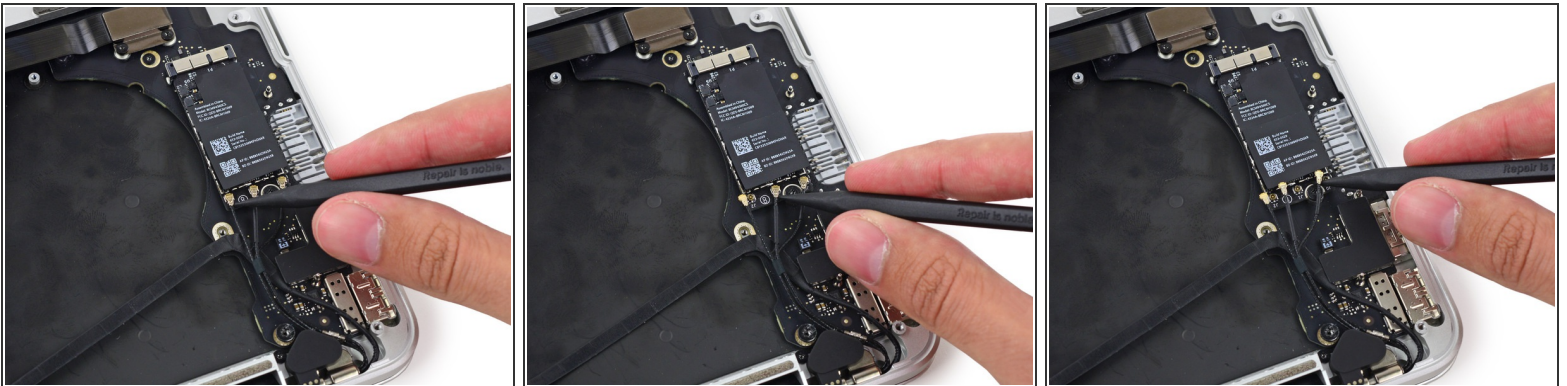

- Insert the tip of a spudger under each of the antenna cables near their connectors and pry up to disconnect them from the AirPort board.




The three cables are coded with black sleeves of different lengths. During reassembly:

- Connect the long-sleeved cable to the center socket.
- The short-sleeved cable connects next to the screw.
- The remaining cable has no sleeve, and connects in the last empty socket, next to the fan.




When reconnecting the antenna cables, run them over the camera cable, not underneath.

Step 63

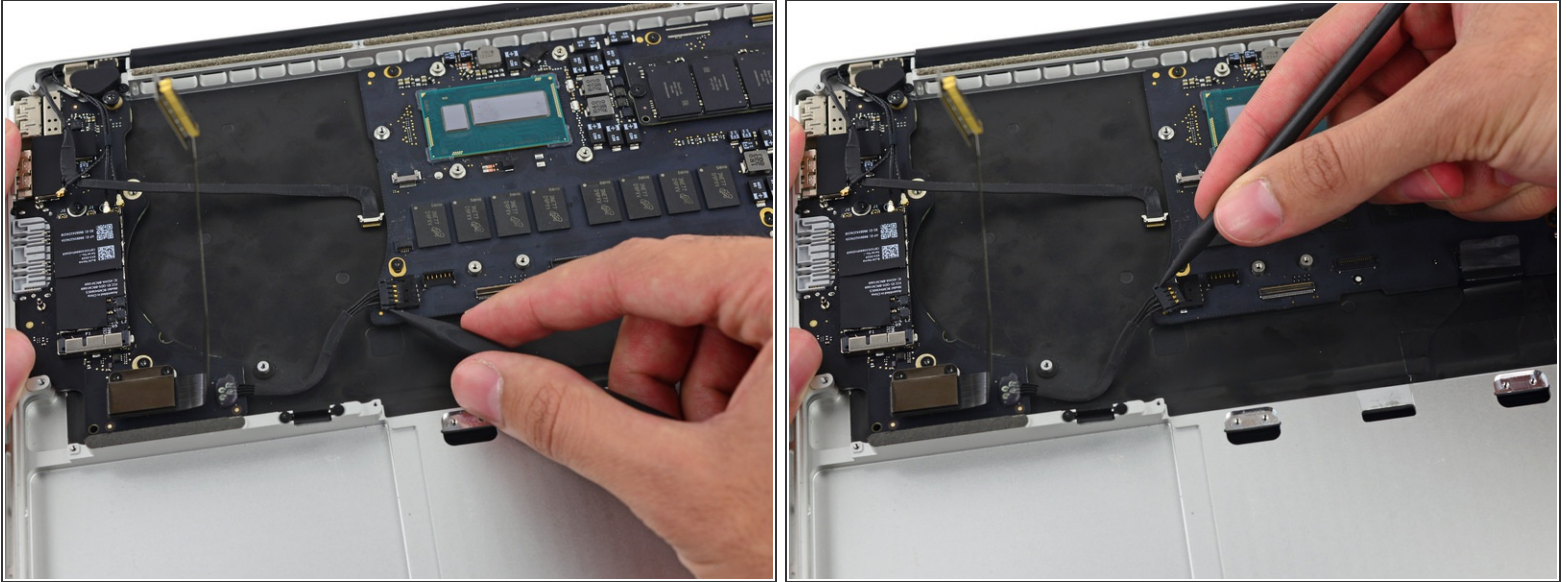

- With the tip of a spudger, push on either side of the I/O board connector to *walk* it out of its socket on the logic board.

Step 64

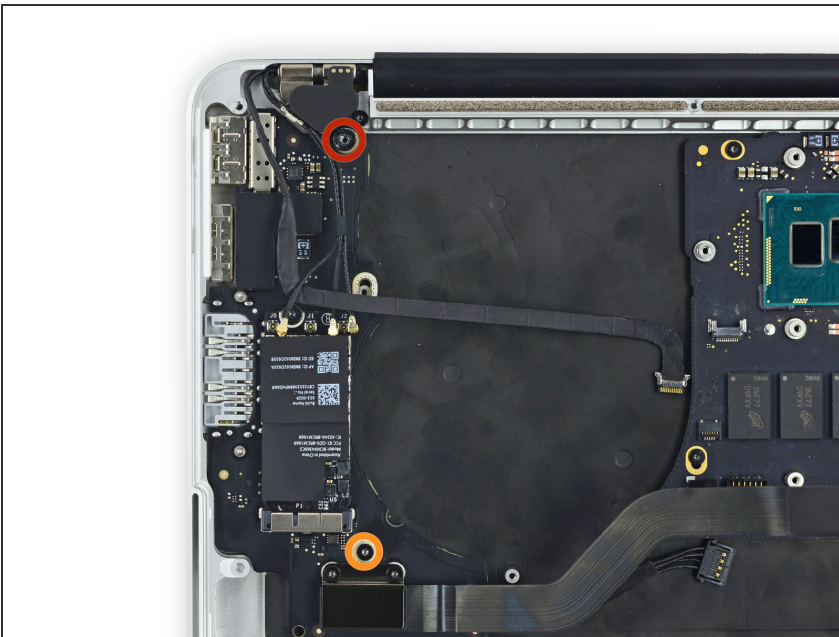


- Remove the following screws securing the I/O board to the upper case:
 - One 3.5 mm T8 Torx standoff screw
 - One 3.5 mm T5 Torx screw

Step 65




- Lift the I/O board cable end of the I/O board and pull toward the logic board to free the ports from the upper case.
 - Remove the I/O board.
- ☒ When reinstalling the I/O board, be sure to slide the USB ports' metal EMI fingers under the side of the case, not over.

Step 66

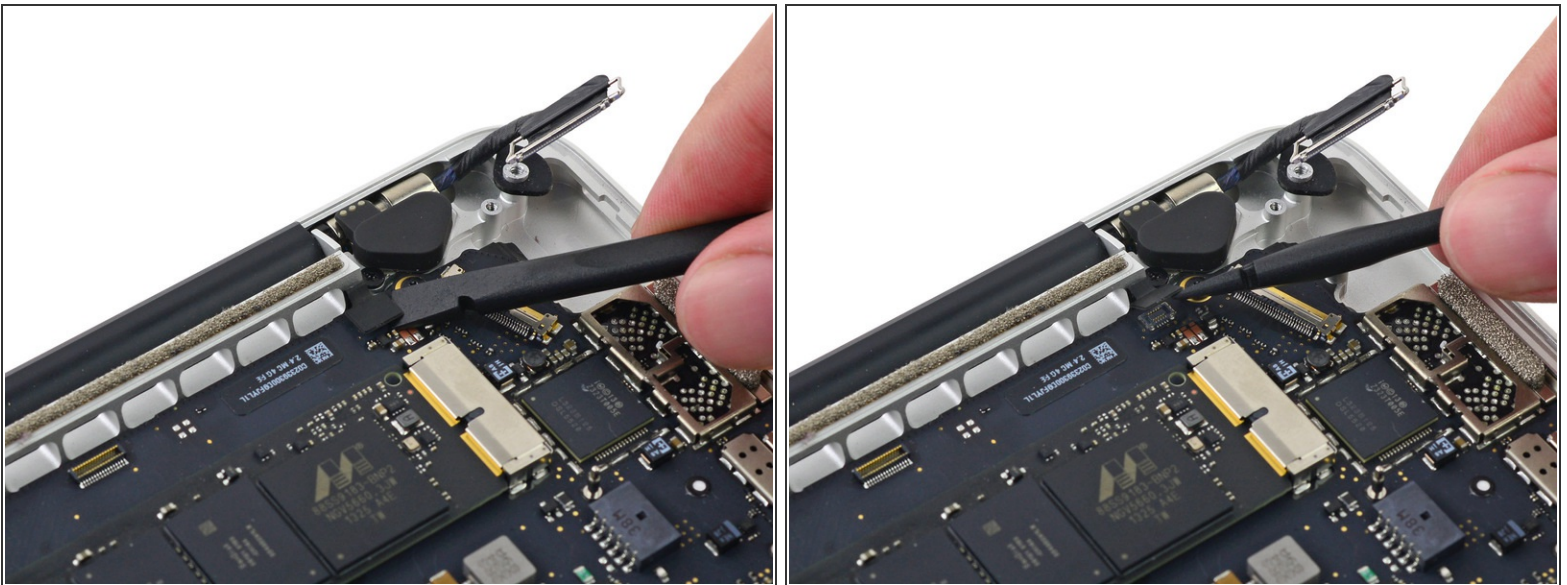


- Use the flat end of a spudger to disconnect the keyboard backlight cable and move it out of the way.

Step 67

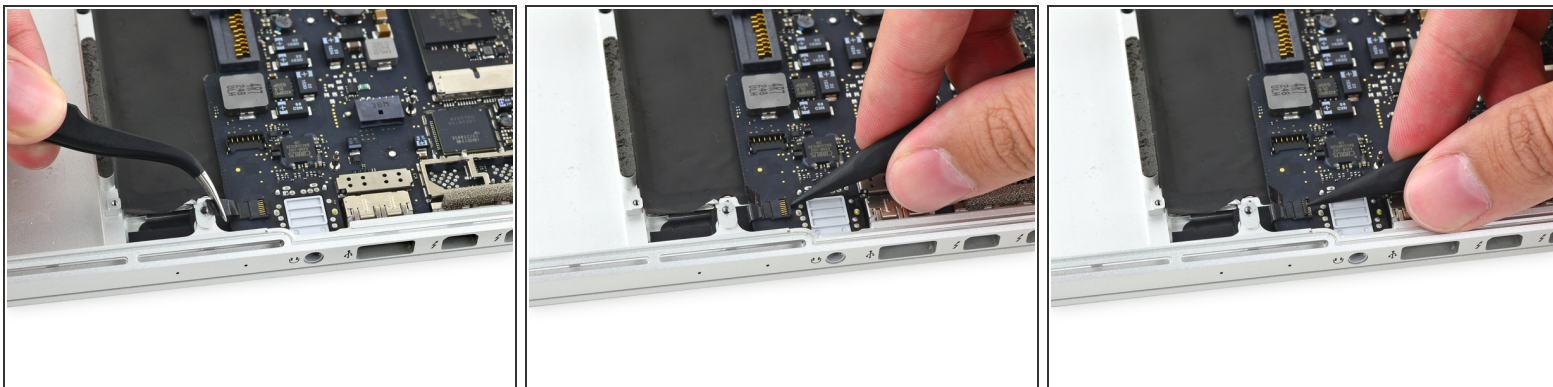


- i** If necessary, peel back any tape covering the microphone cable ZIF connector.
- Use the tip of a spudger to flip the retaining tab on the microphone cable ZIF connector.

Step 68

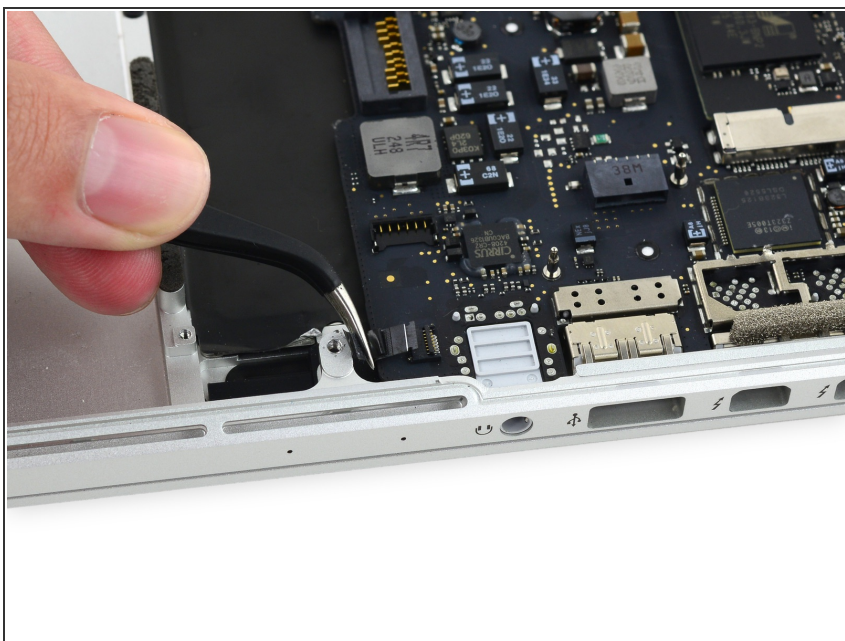

- Pull the microphone cable straight out of its socket on the logic board.


Step 69

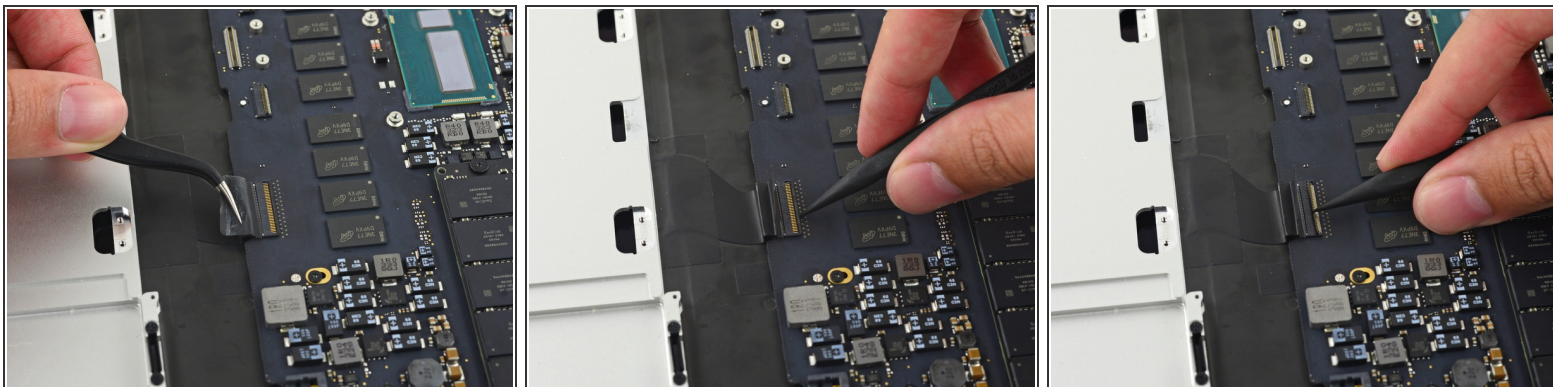

i If necessary, peel back any tape covering the keyboard cable connector.


- Use the tip of a spudger to flip the retaining tab on the ZIF connector.

Step 70

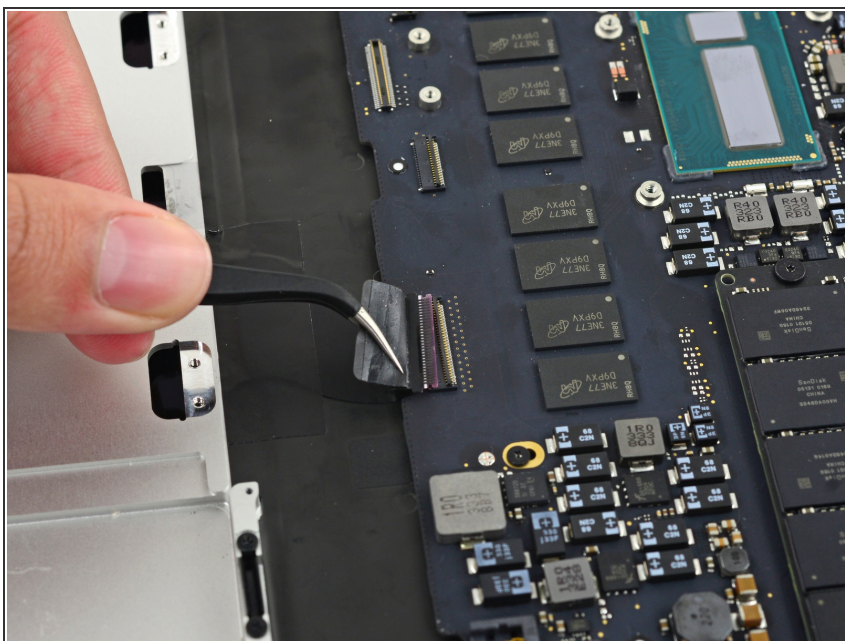




- Pull the keyboard cable straight out of its ZIF socket on the logic board.

Step 71

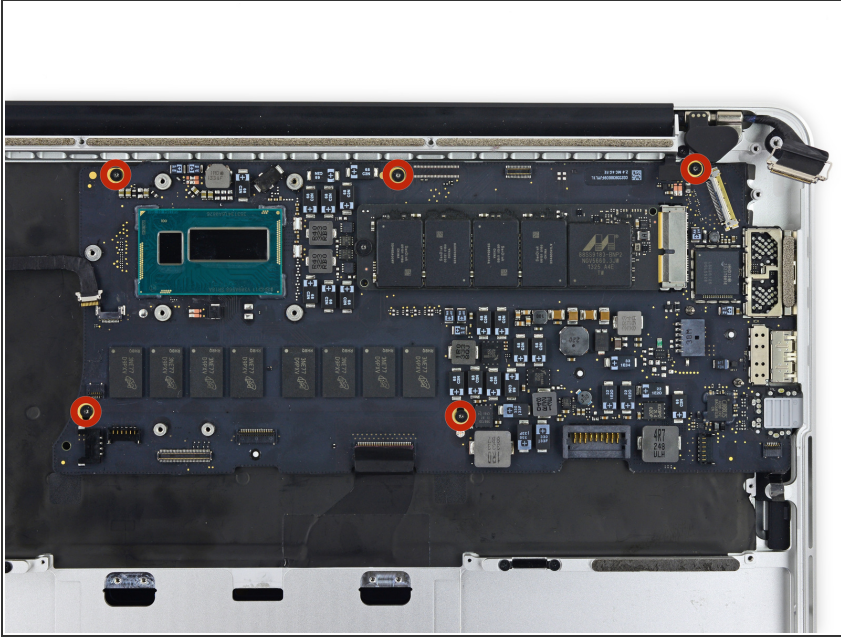

- Remove the five 3.5 mm T5 Torx screws securing the logic board to the upper case.
- ☑ When reassembling, install all five screws loosely, position the logic board, and then tighten evenly.

Step 72

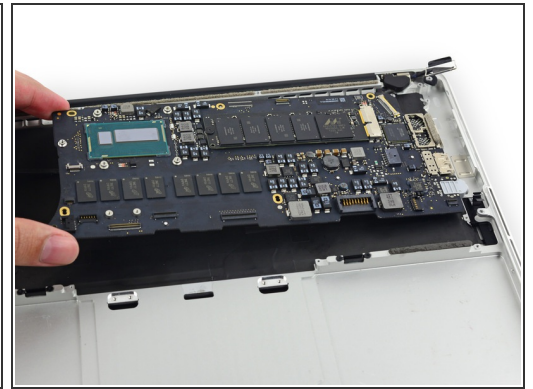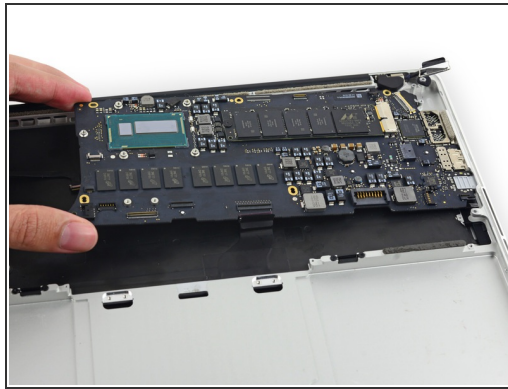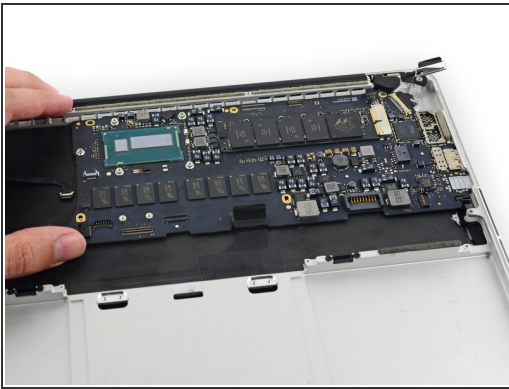

- Lift the processor end of the logic board up slightly and pull it toward the fan recess to free the ports from the edge of the upper case and remove the logic board.
- ☑ When reinstalling, make sure the keyboard, keyboard backlight, and microphone cables don't get trapped beneath the logic board.
- ☑ Also be sure to slide the ports' metal EMI fingers under the side of the case, not over.

Step 73




- Use a pair of tweezers to lift the rubber hinge covers up off the right and left display hinges.

Step 74




- Remove the 3.2 mm T5 Torx screws (one on each side) securing the aluminum hinge brackets to the upper case.

Step 75

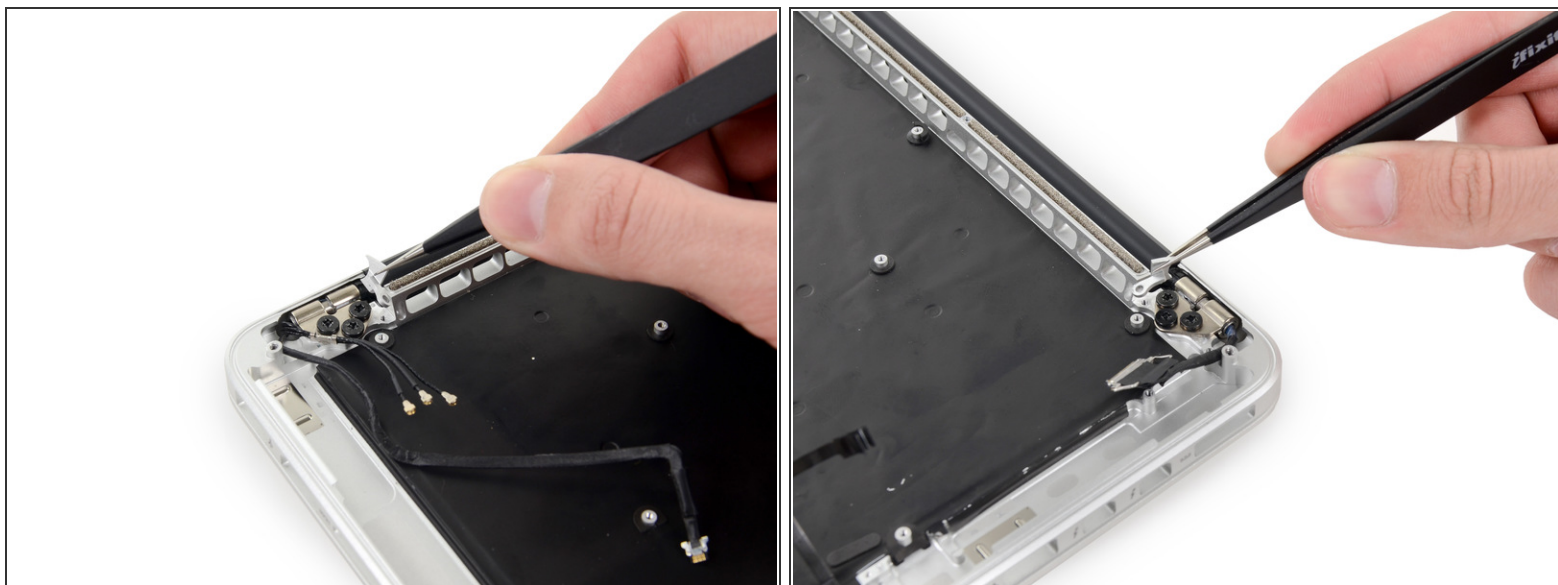

- Use a pair of tweezers to lift aluminum hinge brackets off the right and left display hinges.

Step 76

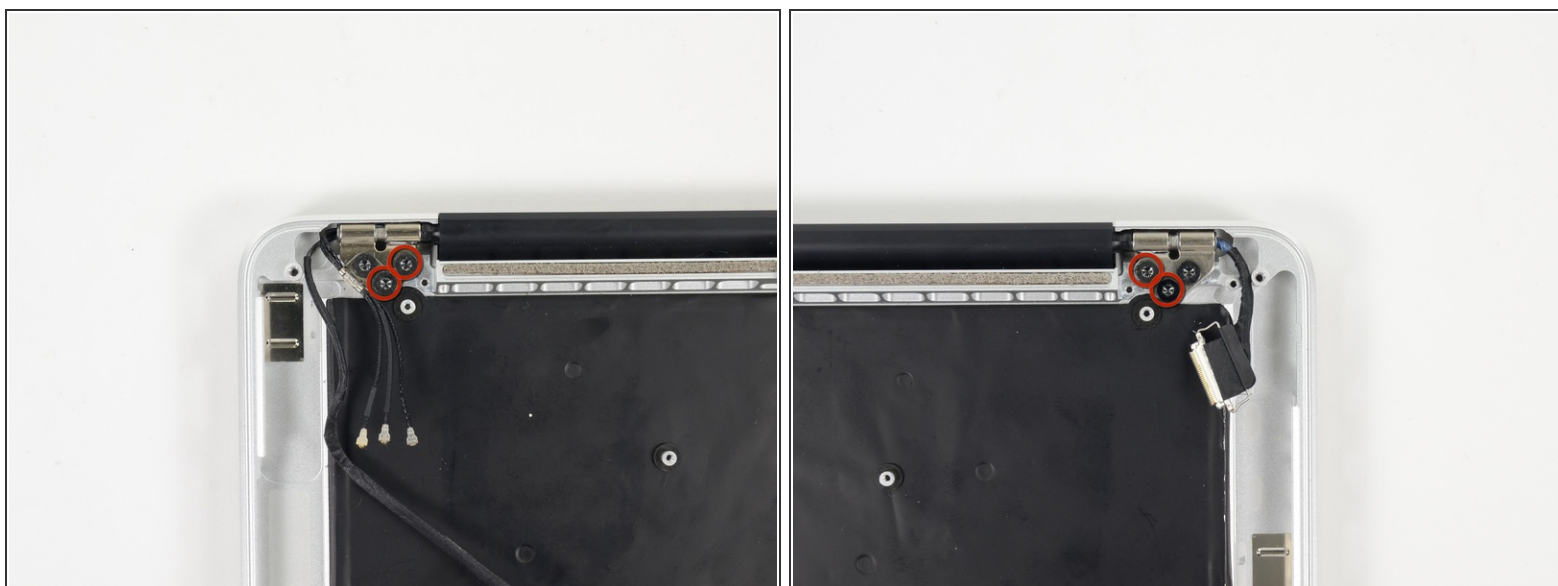

- Remove the four inner 5.3 mm T8 Torx screws (two on each side) securing the display to the upper case.

Step 77




- ✦ Open the MacBook Pro a little wider than 90 degrees, and place it on end, as shown.
- While holding the display and upper case together with your left hand, remove the remaining T8 Torx screw from the lower display bracket.
- ⚠ Be sure to hold the display and upper case together with your left hand. Failure to do so may cause the freed display/upper case to fall, potentially damaging each component.
- Remove the last remaining T8 Torx screw securing the display to the upper case.

Step 78



- Grip both halves of the device, one in each hand.
- Gently push forward on the bottom half of the device to detach it from the display assembly.
- Carefully set each component aside, making sure to set down the lower half keyboard-side down.

Step 79

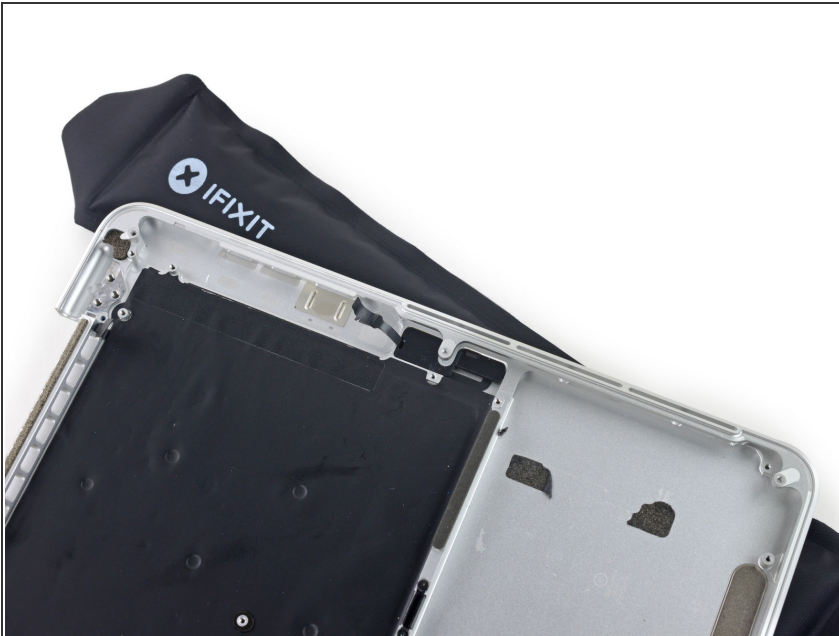

- Place the MacBook on a heated iOpener for about a minute to soften the adhesive securing the dual microphone cable.

Step 80



- Insert the tip of a spudger under the rubber microphone cable cover to free it from the upper case.
- Remove the rubber microphone cable cover.

Step 81




- Insert the tip of a spudger under the connector end of the microphone ribbon cable and lift to peel that section up from the upper case.

Step 82



- Insert the tip of a spudger under the right-hand portion of the microphone ribbon cable and slide it toward the screw post to free it from the upper case.

Step 83

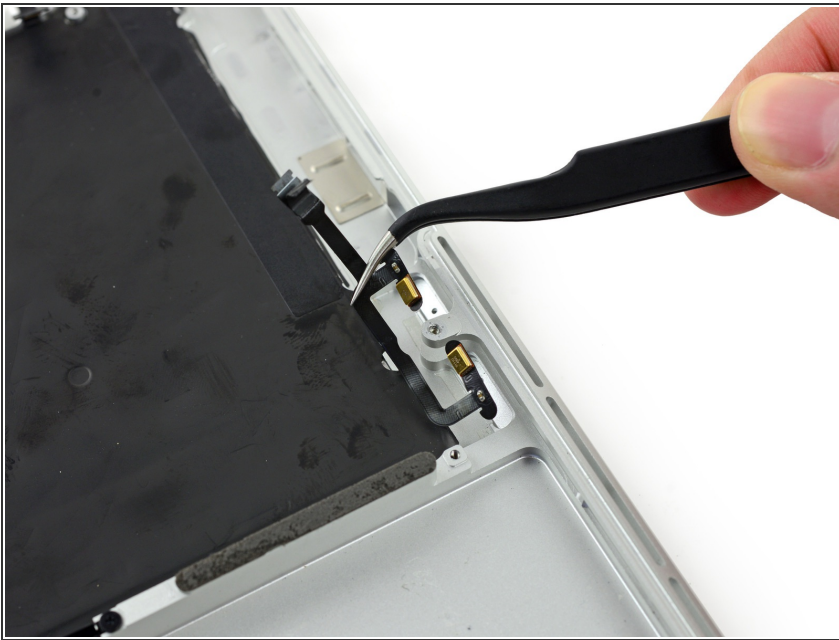

- Remove the microphone cable from the upper case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-14 06:15:36 PM.